

SiPMs as detectors of Cherenkov photons

Peter Križan

University of Ljubljana and J. Stefan Institute

Light07, September 26, 2007

Contents

Photon detection for Ring Imaging Cherenkov counters

Can G-APDs (SiPMs) do the job?

Light collection

Bench tests of surface sensitivity, timing, external optical cross talk

Test set up for cosmic rays






Summary

Measuring Čerenkov angle

From hits of individual photons \rightarrow measure the angle.

Few photons detected

\rightarrow Important to have a **low noise** detector

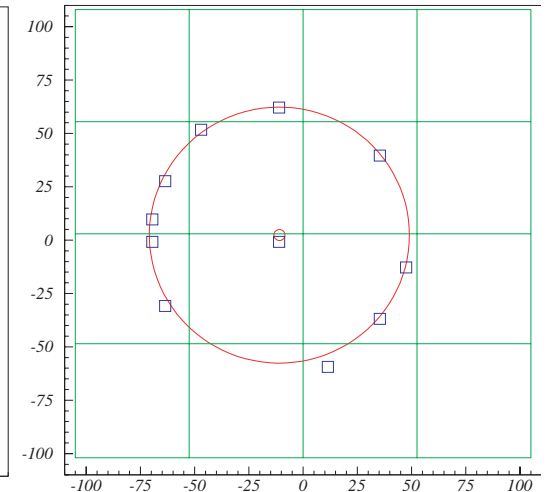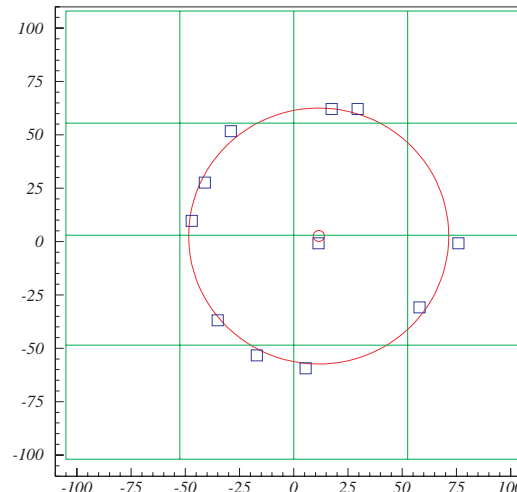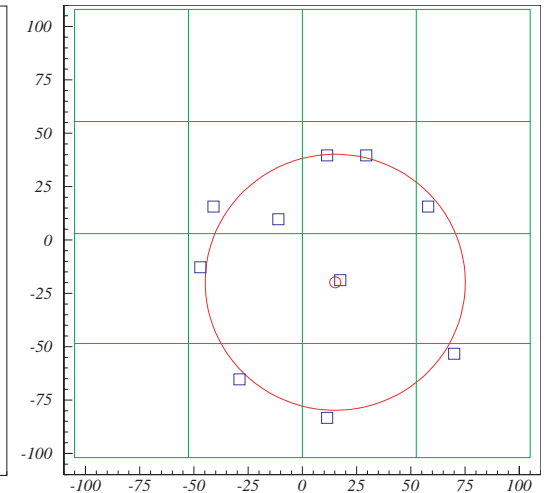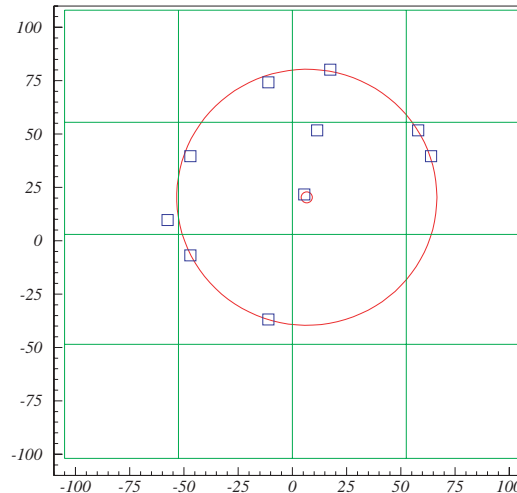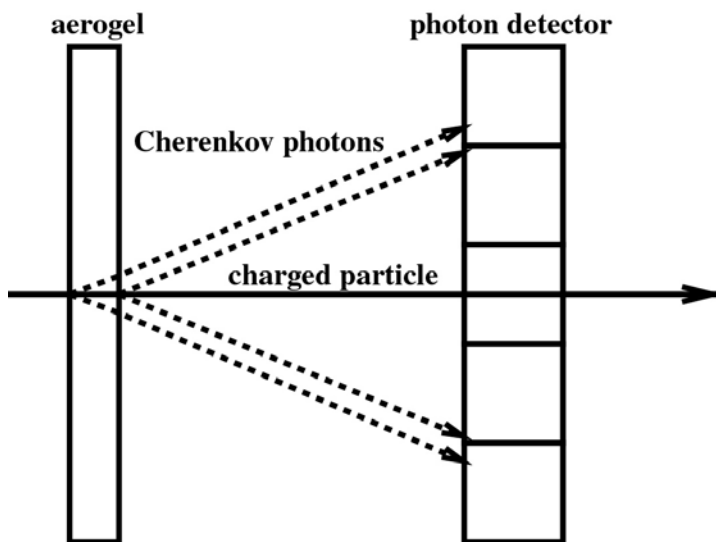


Photon detection in RICH counters

RICH counter: measure photon impact point on the photon detector surface

→ detection of single photons with

- sufficient **spatial resolution**
- **high efficiency** and **good signal-to-noise ratio**
- over a **large area** (square meters)

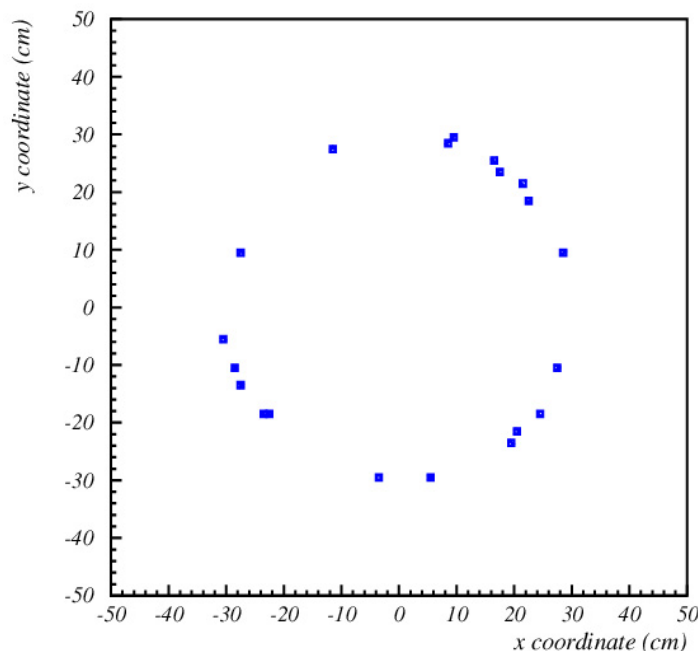

Special requirements:

- **Operation in magnetic field**
- **High rate capability**
- **Very high spatial resolution**
- **Excellent timing (time-of-arrival information)**

Hot topics in photon detection for RICHes

For: super B factories





- Belle PID upgrade
- DIRC (BaBar) upgrade

Single photon detection with:

Operation in high magnetic field (1.5T)

Excellent timing (time-of-arrival information)

DIRC

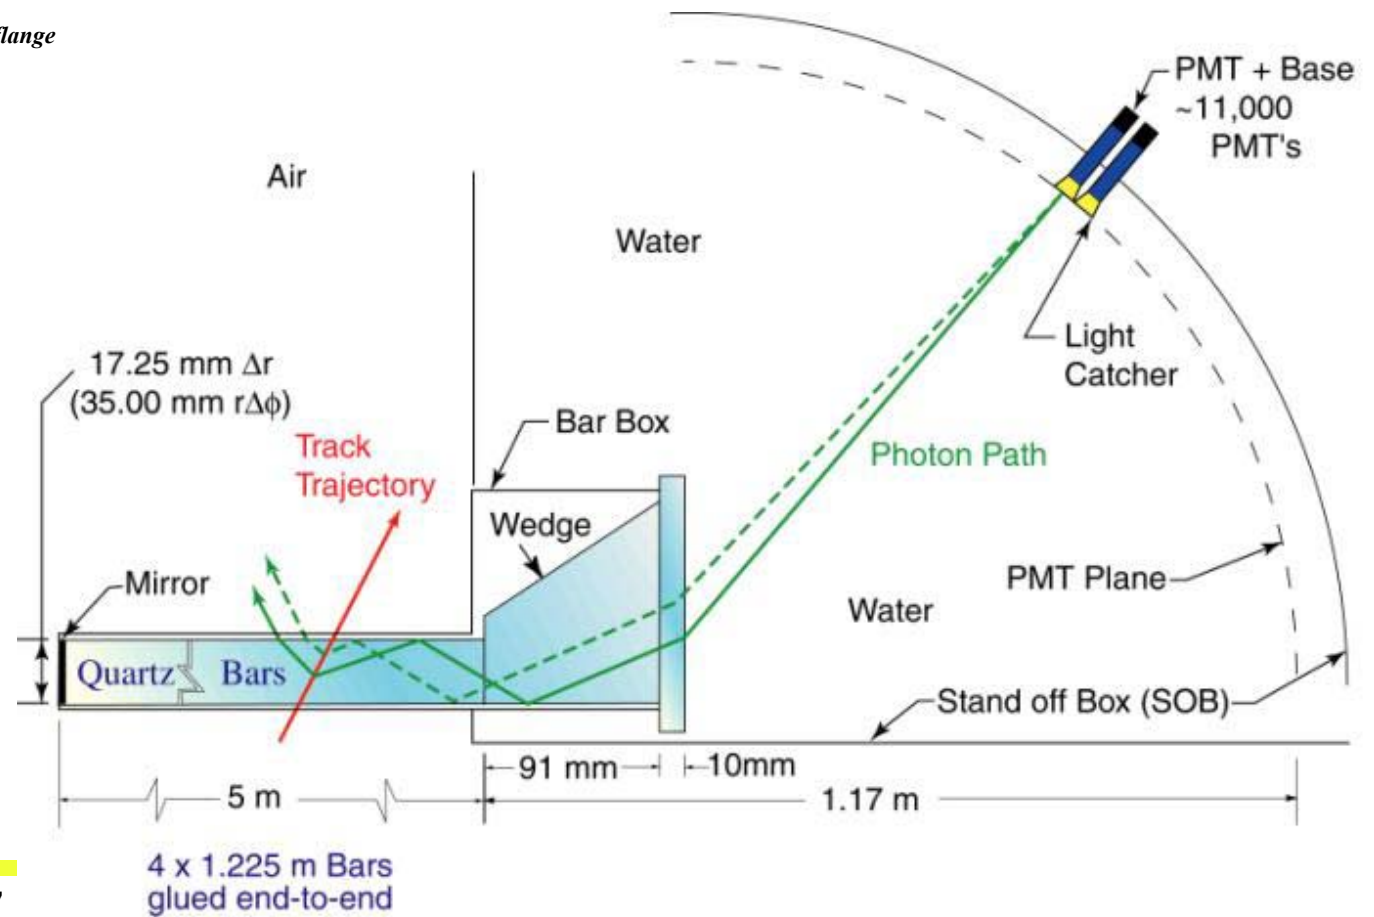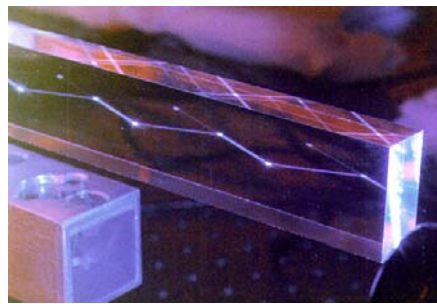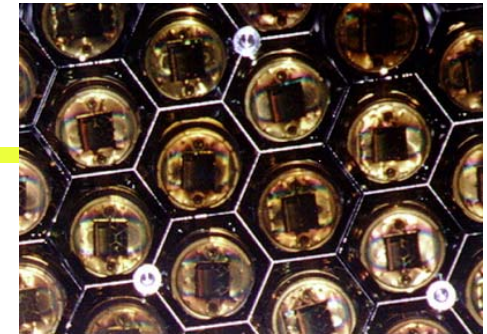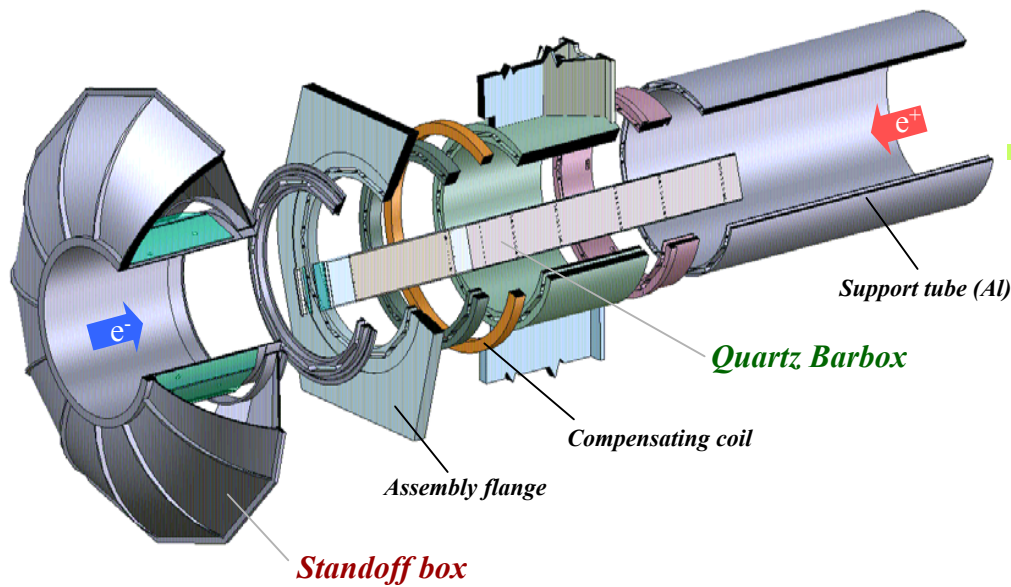


September 26, 2007

Focusing DIRC



Upgrade: remove the stand-off box → focusing DIRC

Use time of arrival to (partly) correct for the chromatic dispersion

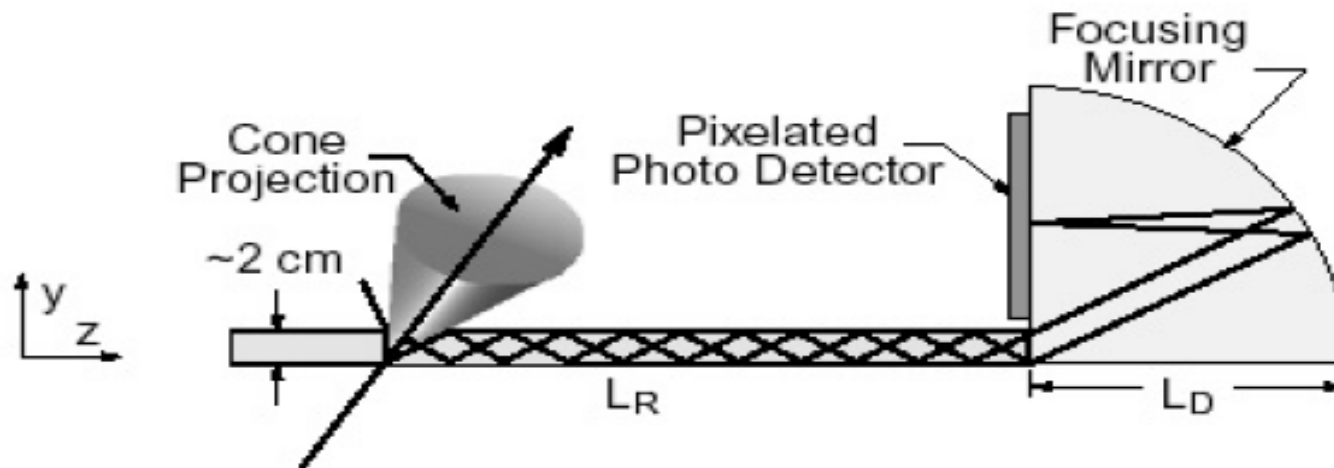


Need:

- Pad size $\sim 5\text{mm}$
- Time resolution $\sim 50\text{-}100\text{ps}$



Belle upgrade – side view

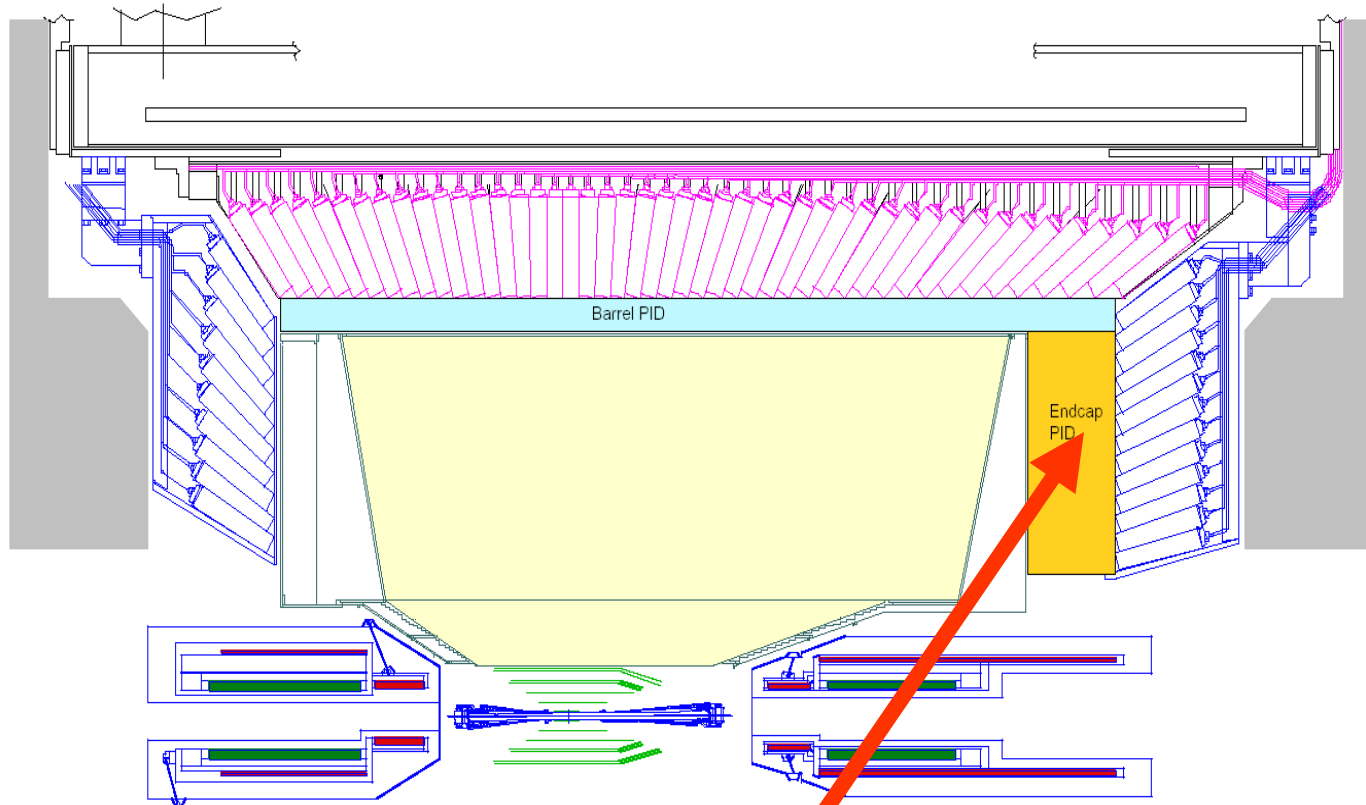

Two new particle ID devices, both RICHes:

Barrel: **TOP** or **focusing DIRC**

Endcap: **proximity focusing RICH**




Endcap: Proximity focusing RICH

K/ π separation at 4 GeV/c:

$$\theta_c(\pi) \sim 308 \text{ mrad} (n = 1.05)$$

$$\theta_c(\pi) - \theta_c(K) \sim 23 \text{ mrad}$$

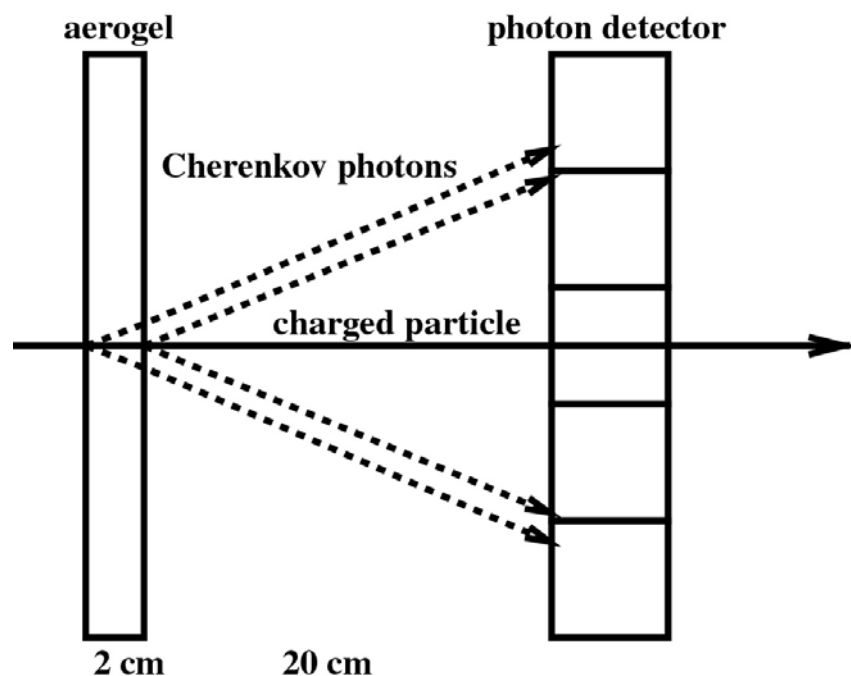

For single photons: $\delta\theta_c(\text{meas.}) = \sigma_0 \sim 14 \text{ mrad}$,
typical value for a 20mm thick radiator and 6mm PMT pad size

Per track:
$$\sigma_{\text{track}} = \frac{\sigma_0}{\sqrt{N_{pe}}}$$


Separation:
$$[\theta_c(\pi) - \theta_c(K)] / \sigma_{\text{track}}$$

→ 5σ separation with $N_{pe} \sim 10$



Beam tests


pion beam (π^2) at KEK

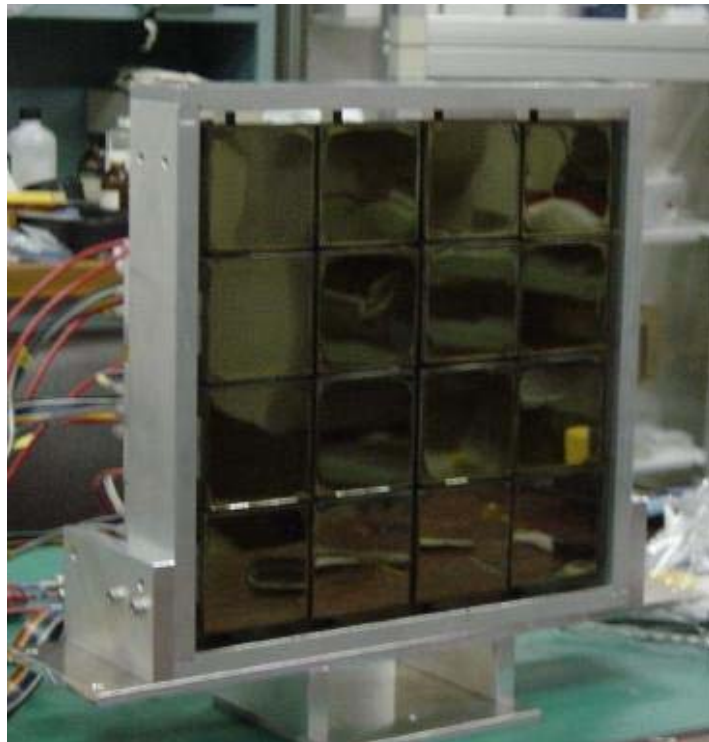



Photon detector: array of 16
H8500 (flat pannel) PMTs

π

Aero-
gel

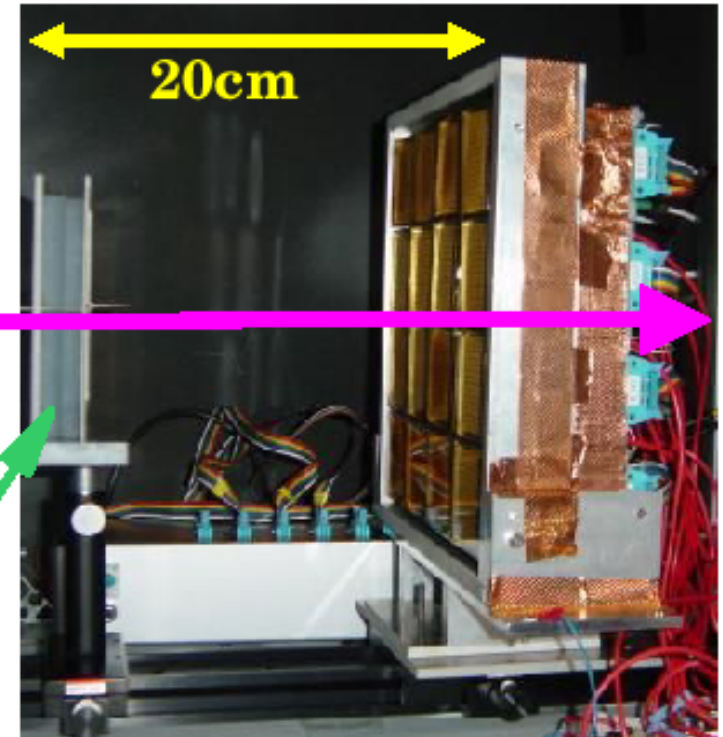

Clear rings, little background

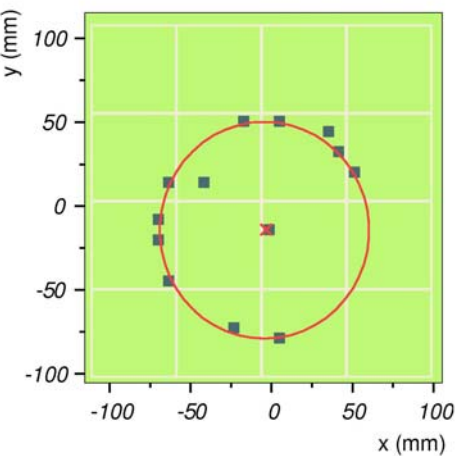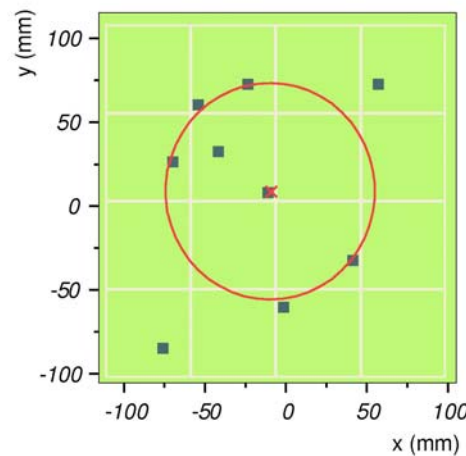




Beam test: Cherenkov angle resolution and number of photons

NIM A521(2004)367; NIM A553(2005)58

Beam test results with 2cm thick aerogel tiles:

>4 σ K/ π separation

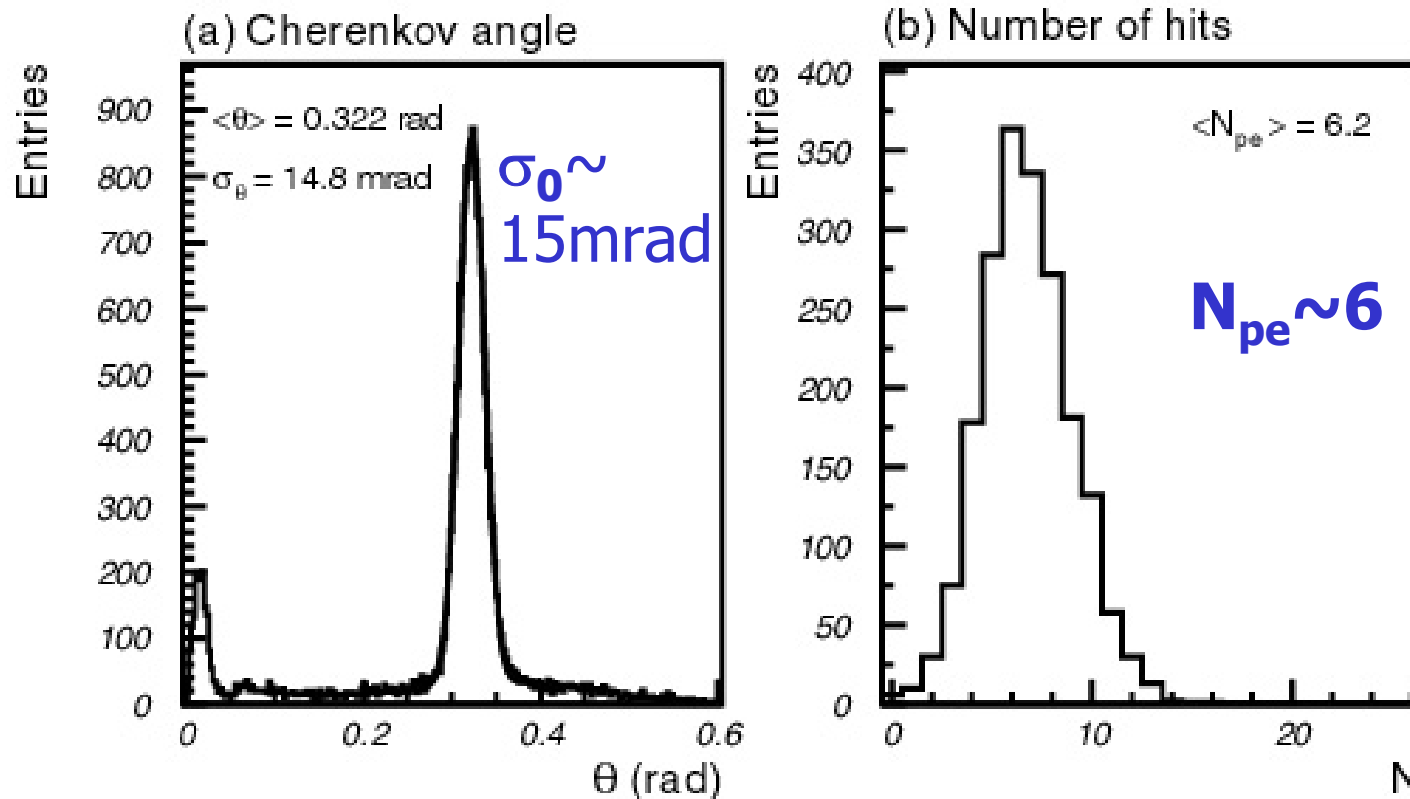

→ This photon detector does not work in magnetic field

Photon detectors for the aerogel RICH

Photon detector candidates for 1.5T:

- BURLE 85011 microchannel plate (MPC) PMT →
talk by Samo Korpar tomorrow
- Multichannel H(A)PD – R+D with Hamamatsu
- SiPM (G-APD)

SiPMs for the aerogel RICH – the group

R. Dolenec, S. Korpar, P. Križan, A. Petelin, R. Pestotnik
J. Stefan Institute, Ljubljana, Slovenia
University of Ljubljana, Slovenia
University of Maribor, Slovenia


K. Hara, T. Iijima, Y. Mazuka, M. Yamaoka
Nagoya University, Nagoya, Japan

SiPM as photon detector?

Can we use SiPM (Geiger mode APD) as the photon detector in a RICH counter?


- +immune to magnetic field
 - +high photon detection efficiency, single photon sensitivity
 - +easy to handle (thin, can be mounted on a PCB)
 - +potentially cheap (not yet...) silicon technology
 - +no high voltage
- very high dark count rate (100kHz – 1MHz) with single photon pulse height

Ring on a uniform background

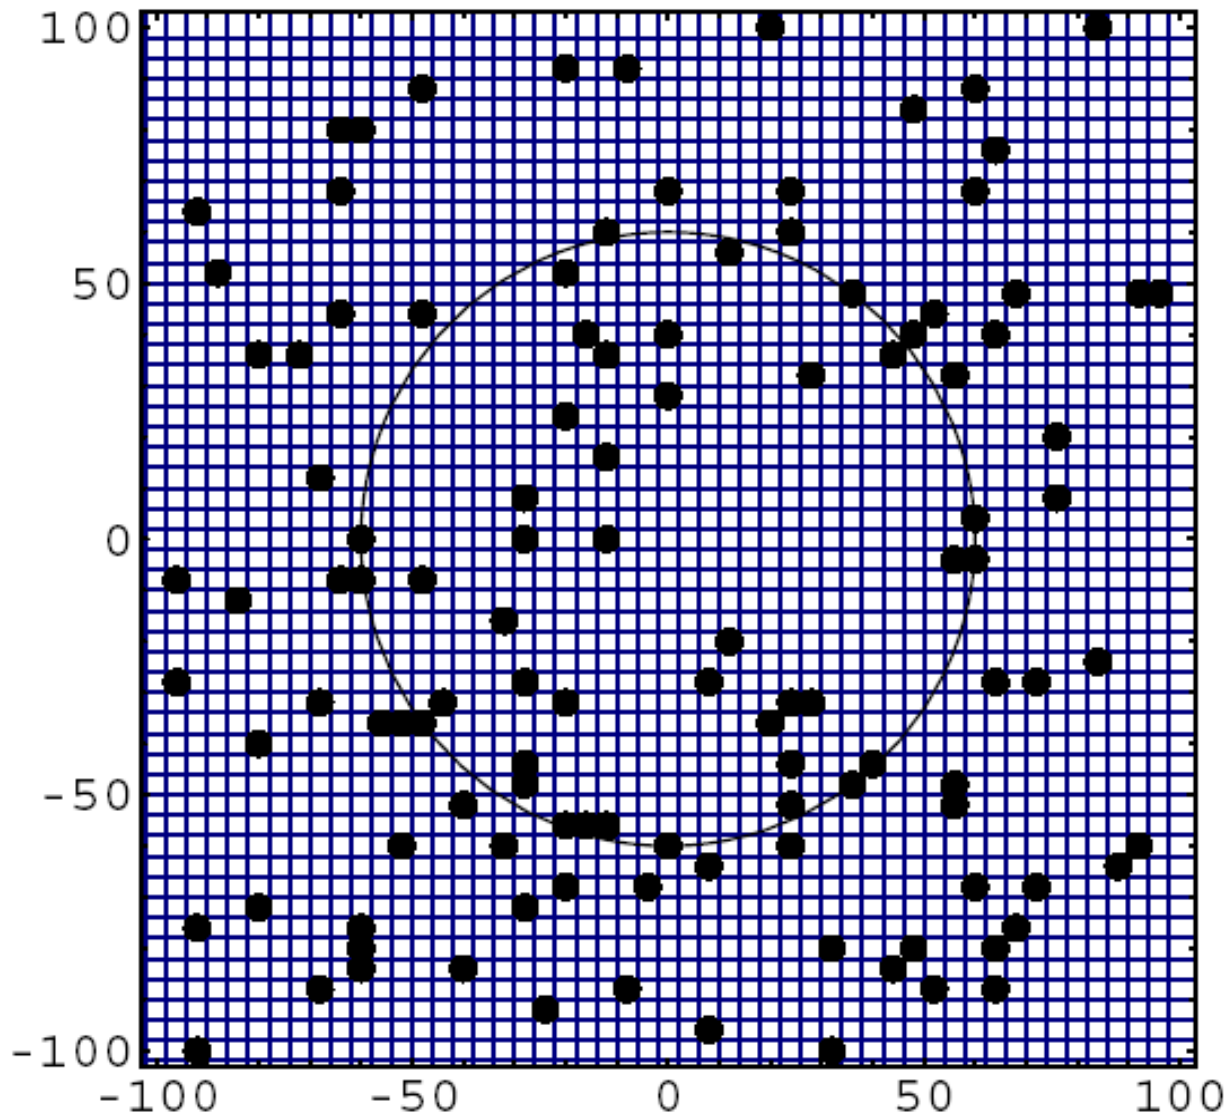

Can such a
detector work?


Can such a detector work?

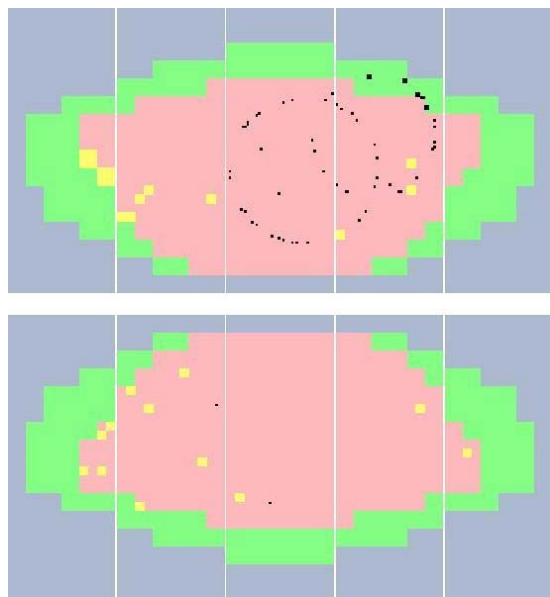

HERA-B RICH experience:


← Little noise, ~30 photons per ring

Typical event →

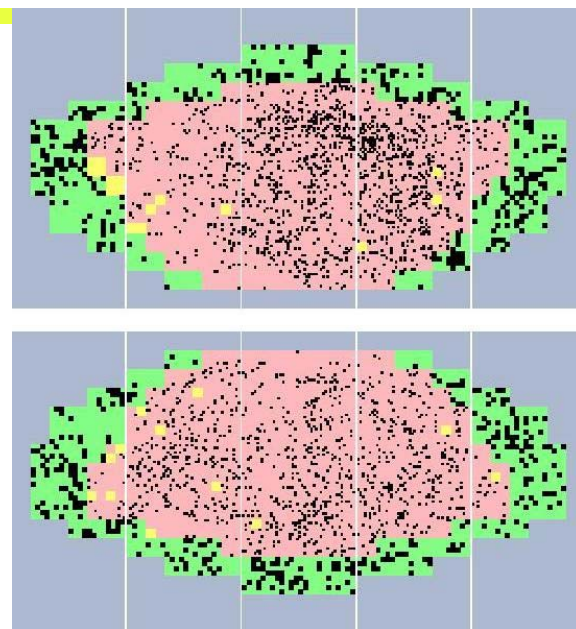

Worked very well!

Kaon efficiency
and pion, proton
fake probability

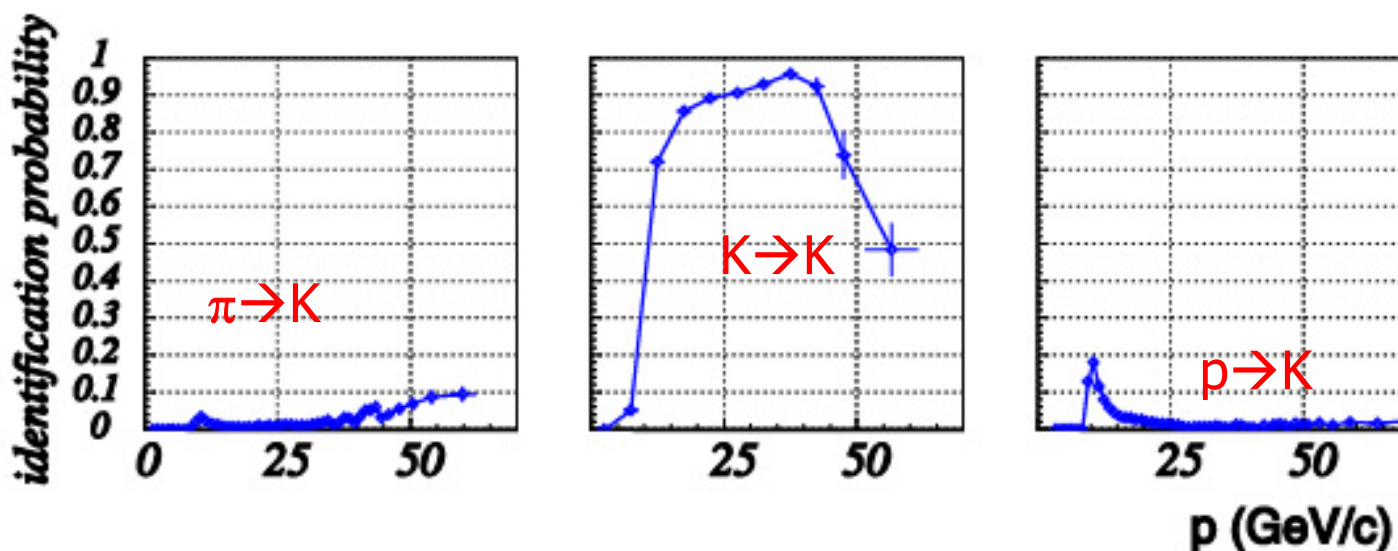



Need >20 photons per ring for a reliable PID.

Can such a detector work?

Improve the signal to noise ratio:

- Reduce the noise by a narrow ($<10\text{ns}$) time window
- Increase the number of signal hits per single sensor by using light collectors and by adjusting the pad size to the ring thickness

Light collector with reflective walls

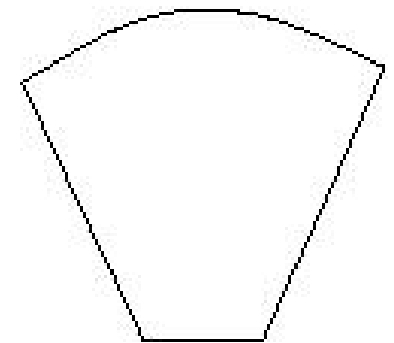
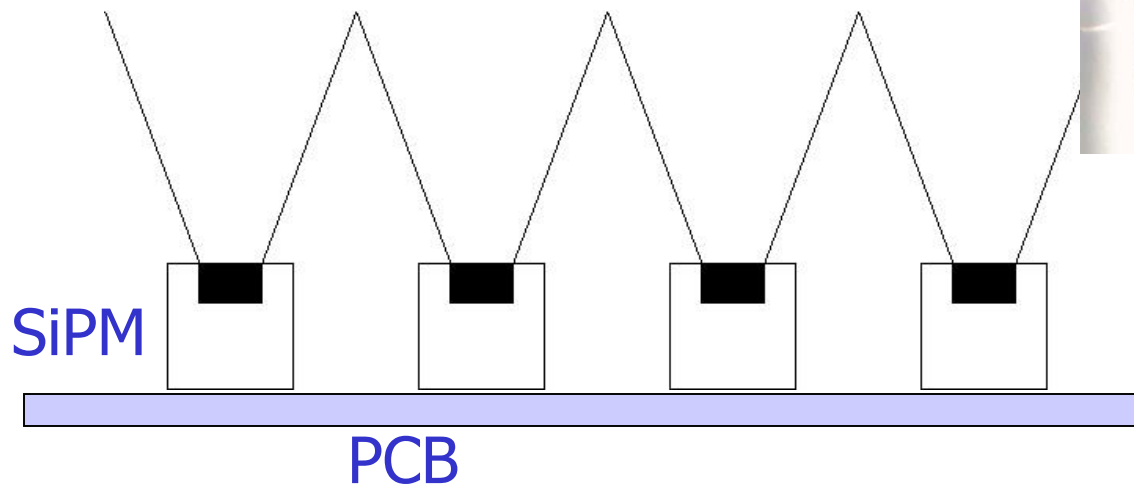


or combine a lens
and mirror walls

Can such a detector work?


MC simulation of the counter response: assume 1mm² active area SiPMs with 0.8 MHz (1.6 MHz, 3.2 MHz) dark count rate, 10ns time window. Vary light collector demagnification (=pad size).

K identification efficiency at 1% π missid. probability

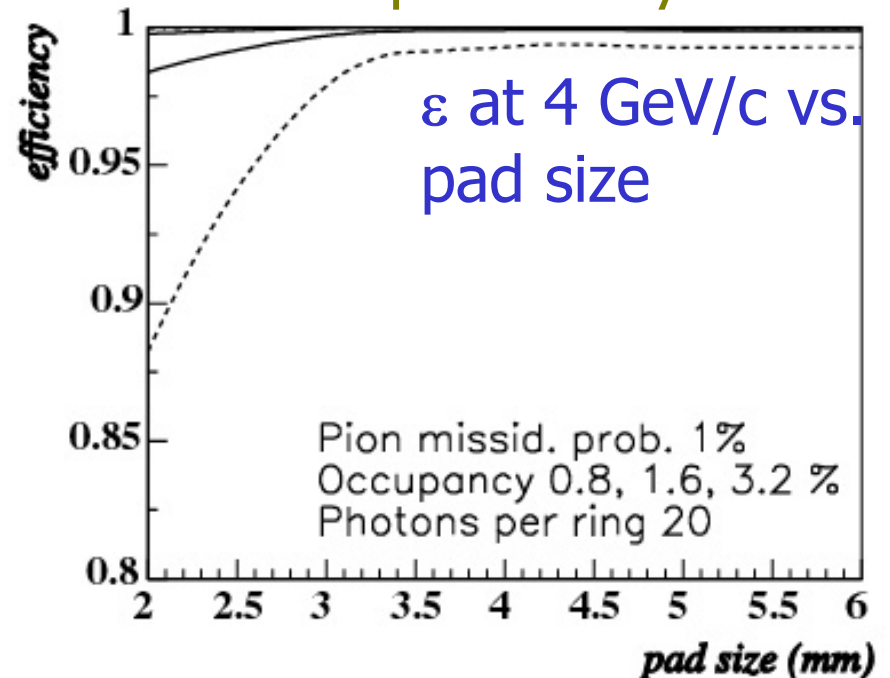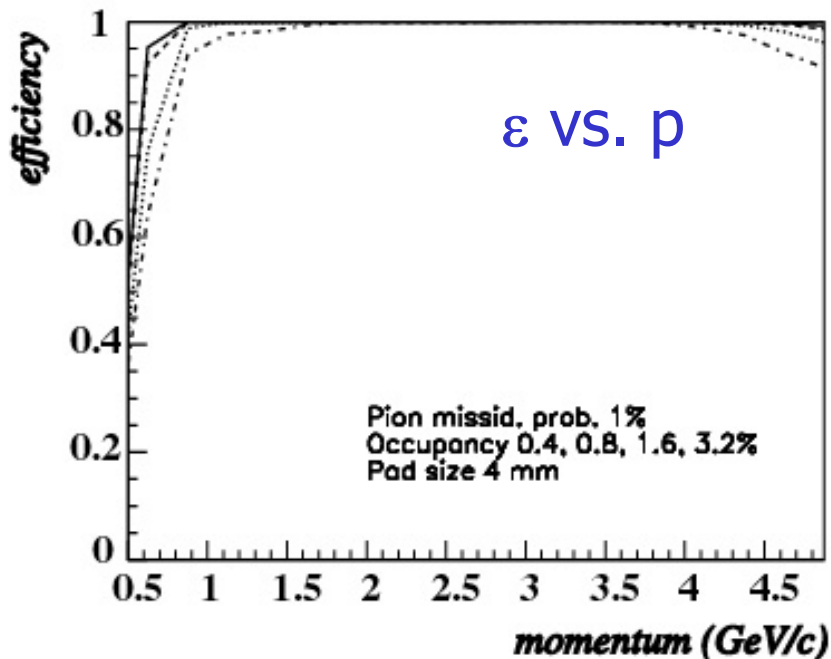

→ Looks OK!

Bench tests set up

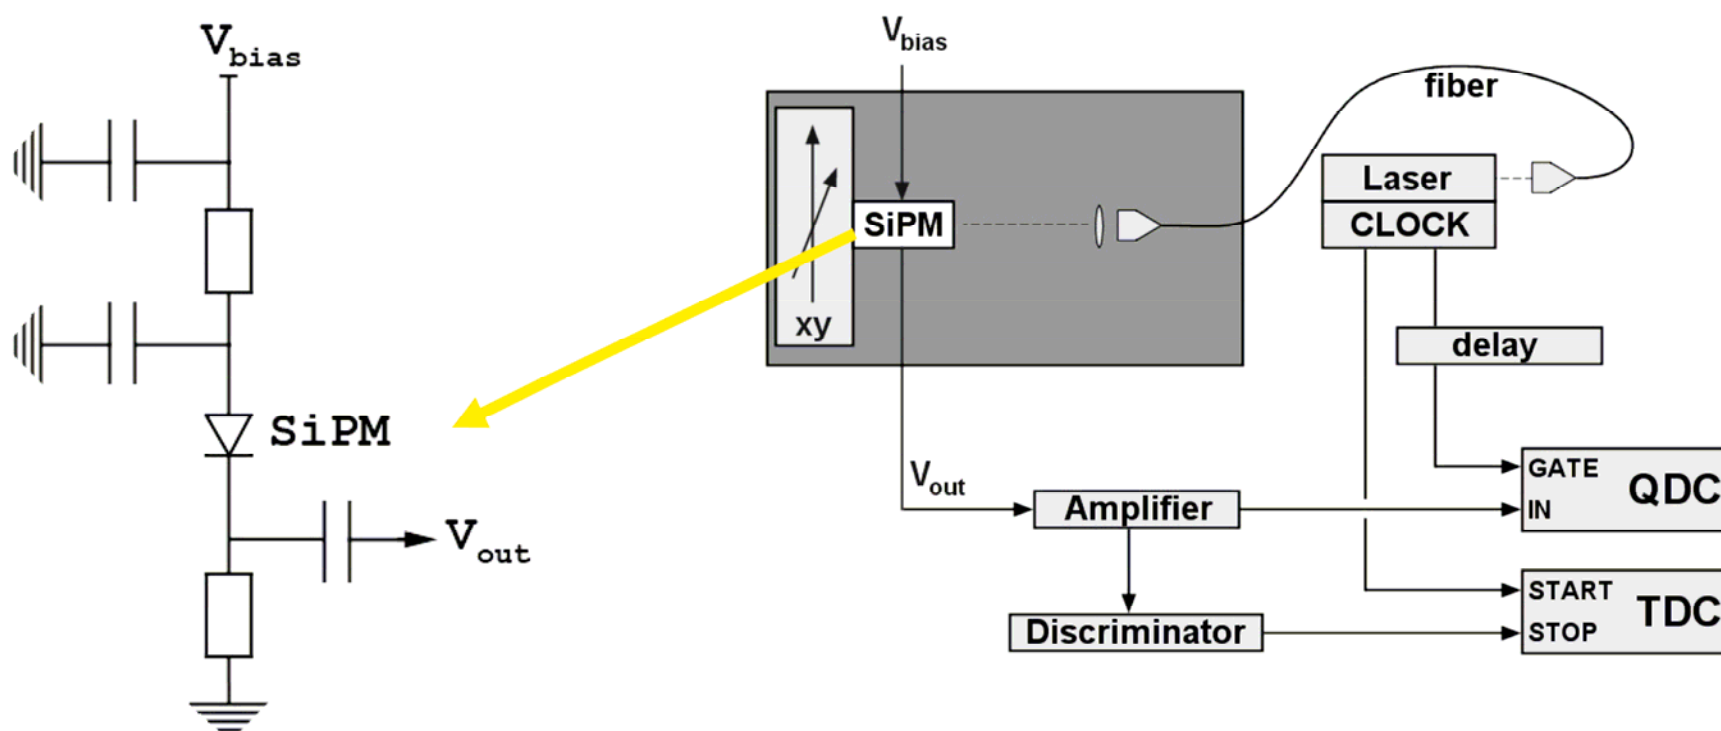

- Light sources: pulsed pico-second lasers (404nm and 653nm) with $\sigma \approx 5 \mu\text{m}$ spot size
- SiPMs mounted on a PC controlled 2d stage, min. step $1 \mu\text{m}$

Bench tests: sensors


- Mephi: E407
- CPTA (Photonique): S137
- Hamamatsu MPPCs: H100C, H050C, H025C

producer data


sensor	size (mm ²)	pixels	pixel size (μm)	$A_{\text{pixel}} / A_{\text{total}}$	highest PDE	dark counts
E407	1.2	1156	33	–	–	–
S137	1	556	43	–	–	–
H100C	1	100	100	78.5 %	65 %	372 kHz
H050C		400	50	61.5 %	50 %	232 kHz
H025C		1600	25	30.8 %	25 %	104 kHz

Pulse height spectra


E407

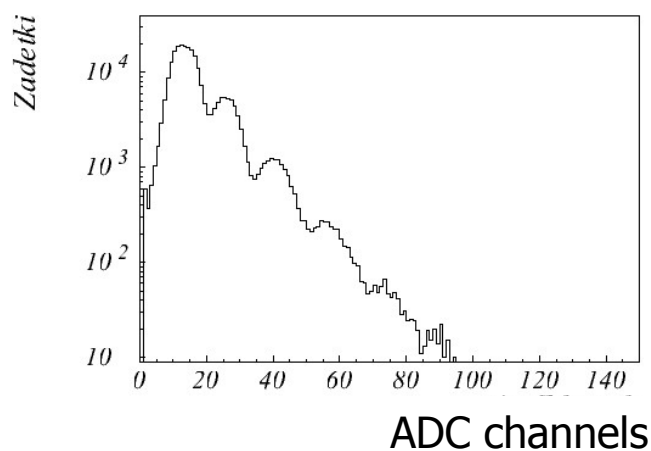


S137

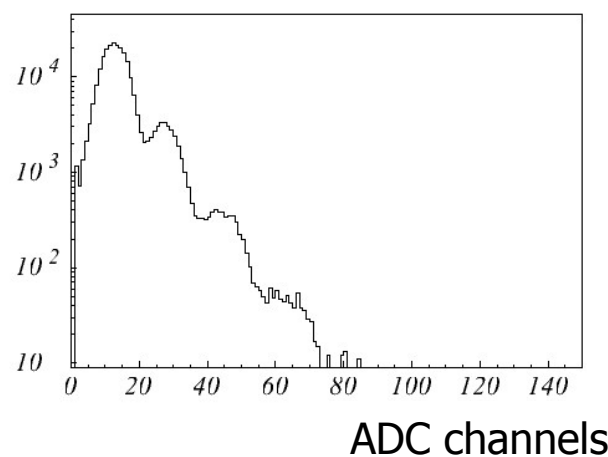


H100C

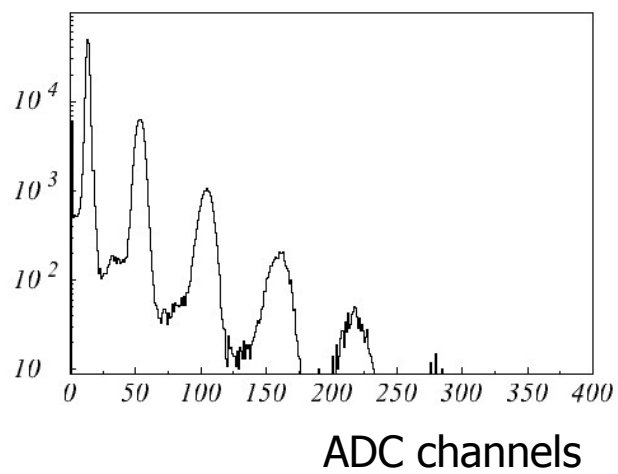

H050C

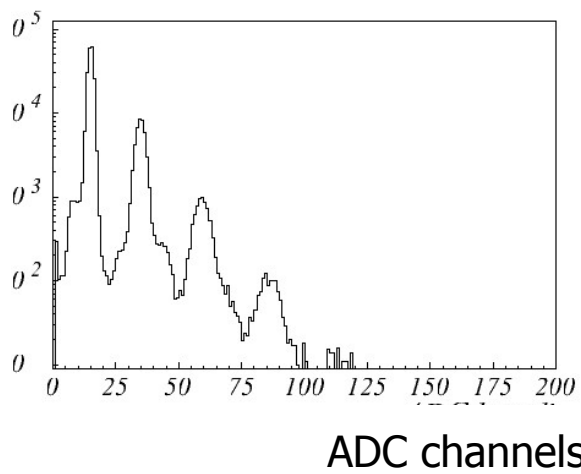

H025C

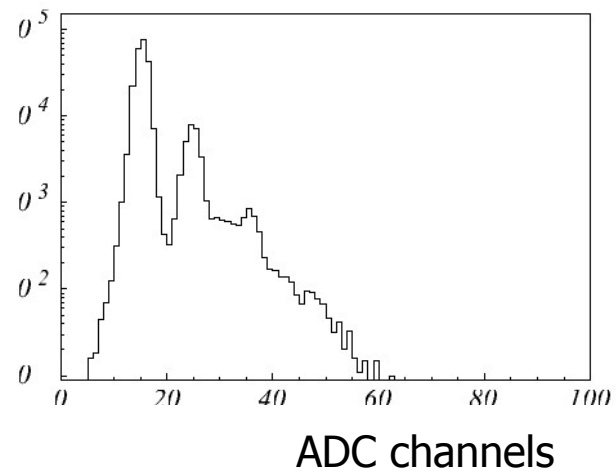


Can we distinguish single photon counts from multiple ones?

Given the narrow pulse-height distributions in the spectrum, how well can distinguish a single photon hit from a multi-photon hit?

Surprisingly enough, the answer is **not as well as the spectrum form suggests**.

Reason: photon feed-back.
'2 photon' peak is actually:

- 1 photon + feed-back and
- 2 photons + no feed-back

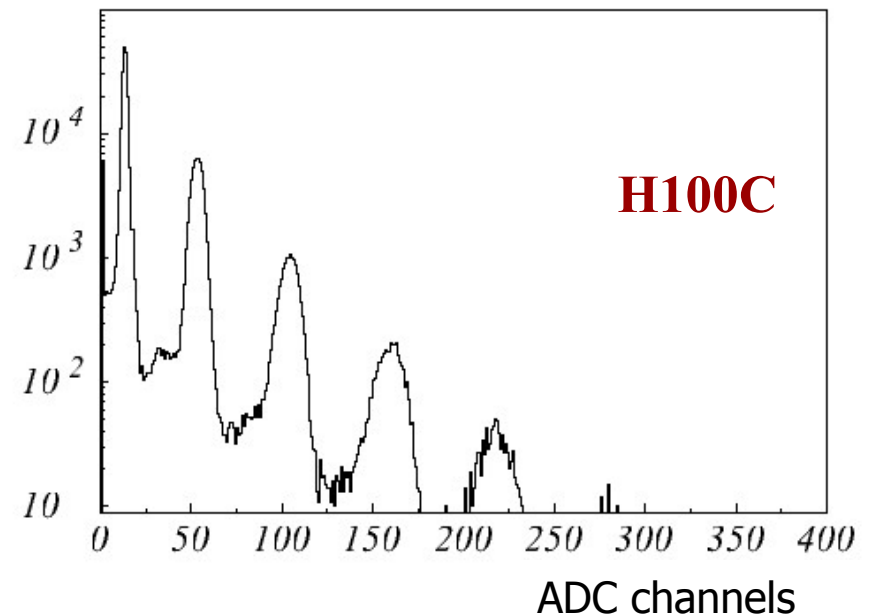

→ Have to be careful when advertising the pulse height spectra



Surface sensitivity for **single** photons

- 2d scan in the focal plane of the laser beam ($\sigma \approx 5 \mu\text{m}$)
- intensity: on average $\ll 1$ photon
- Selection: single pixel pulse height, in TDC 10 ns window

5 μm step size


S137

Close up: 1 μm step size

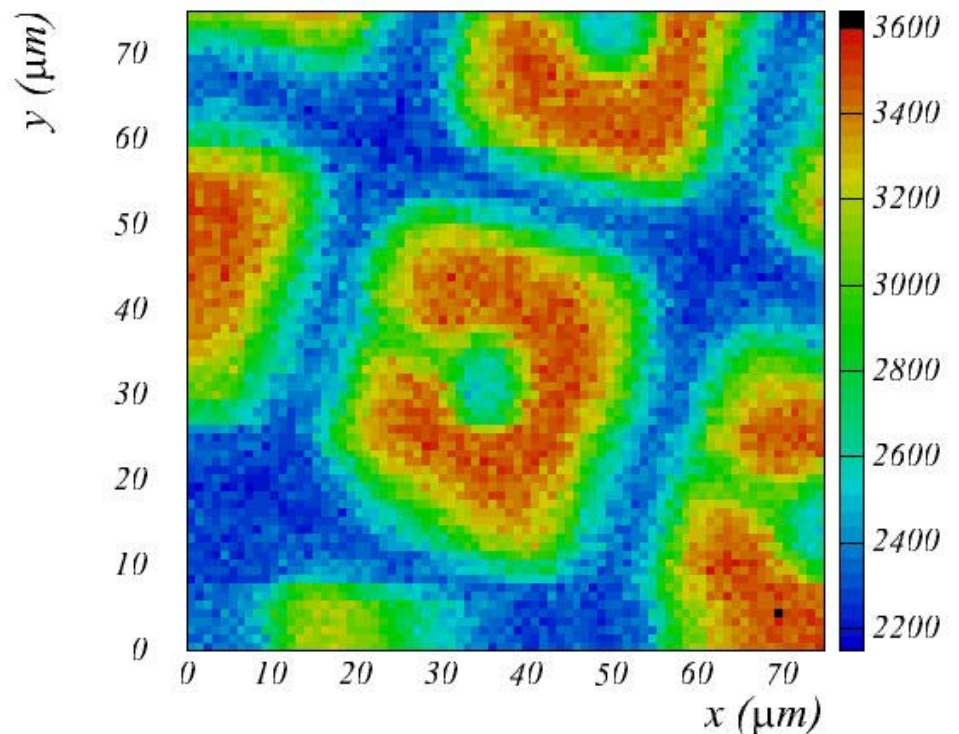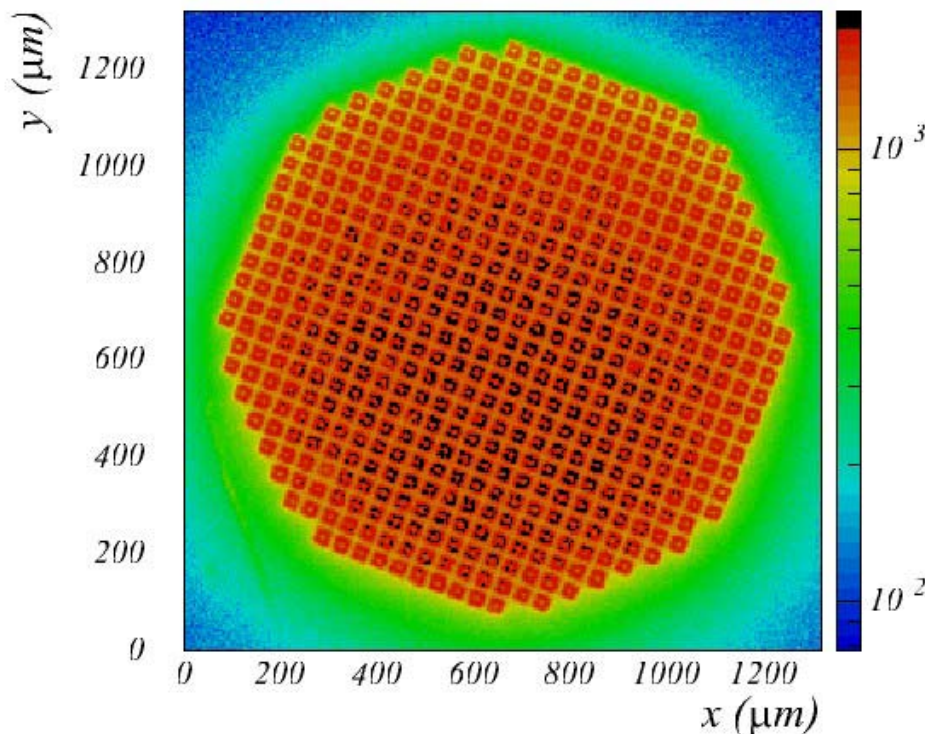


Surface sensitivity for single photons 2

E407

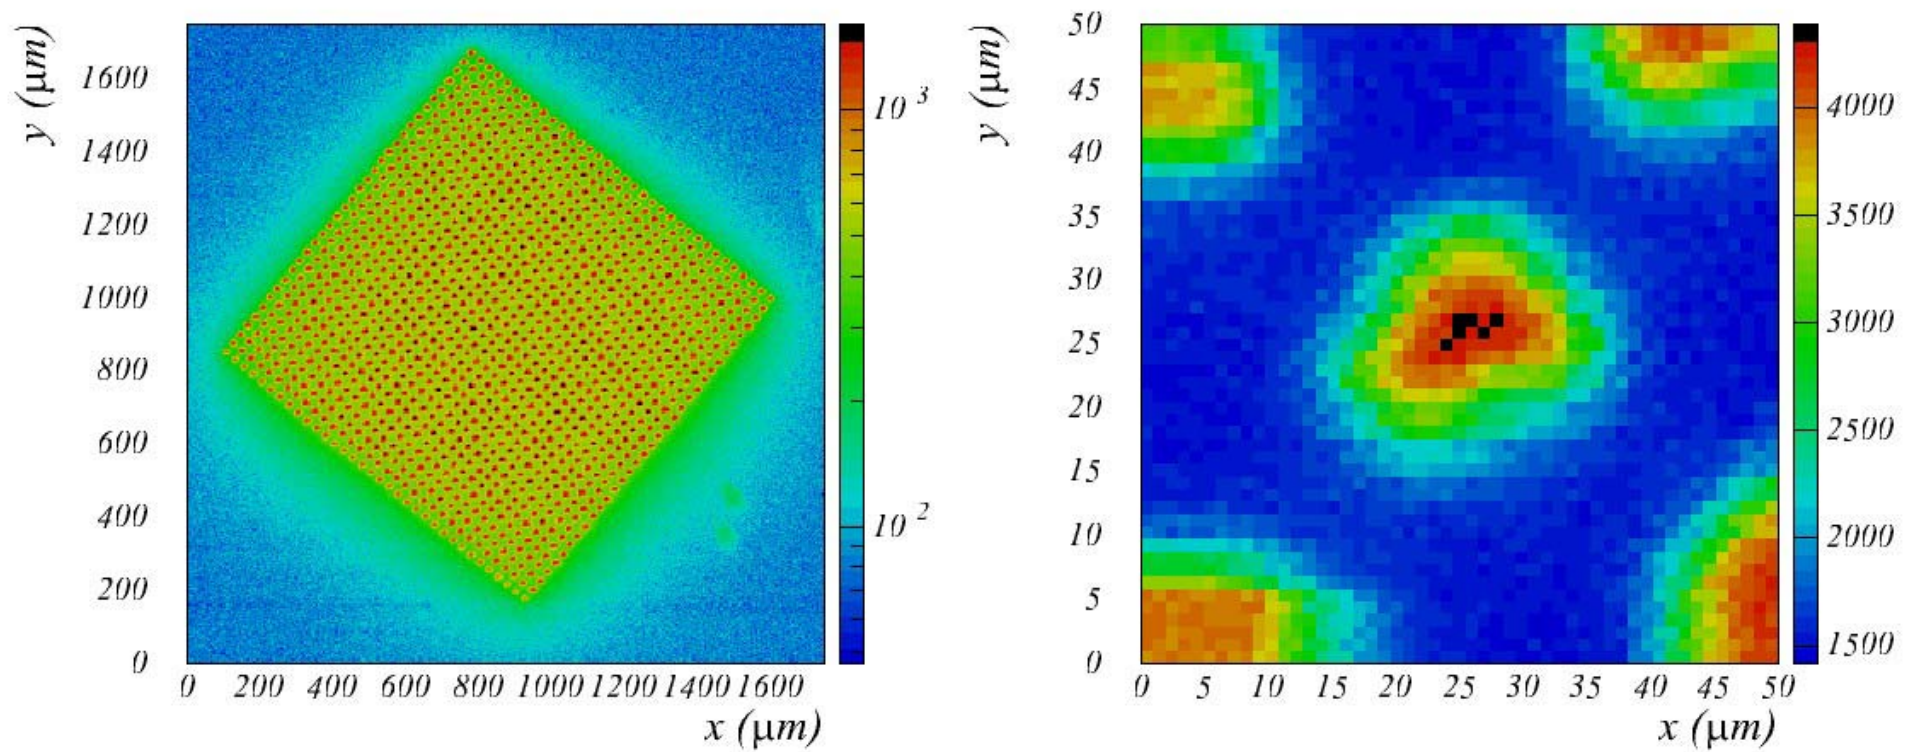


Surface sensitivity for single photons 3

H050C

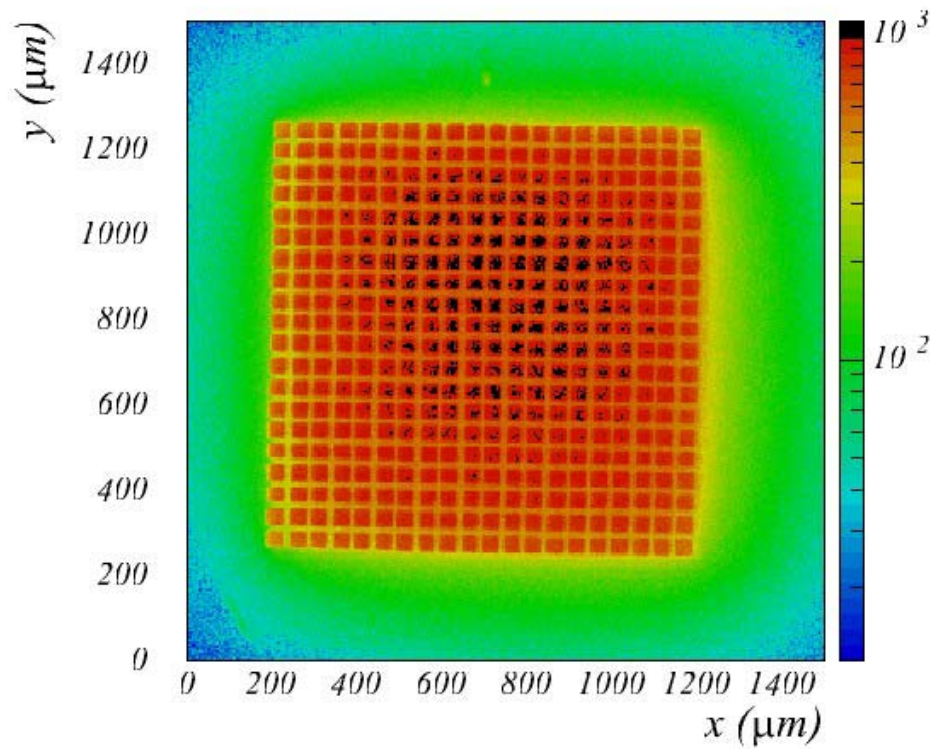


H025C

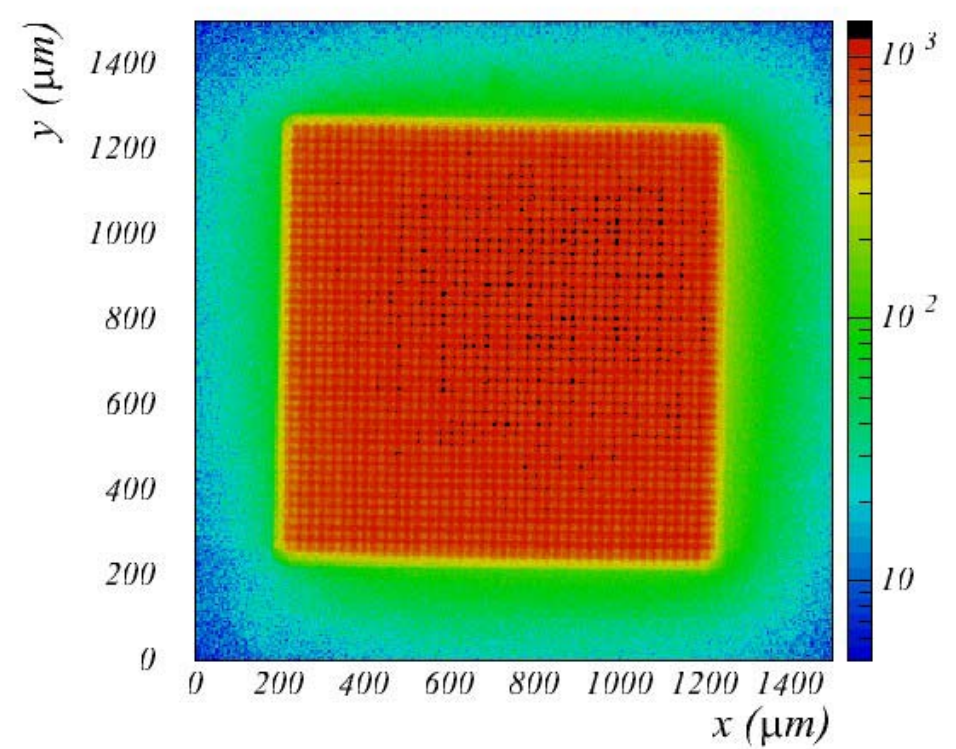


Surface sensitivity for single photons 4

H100C


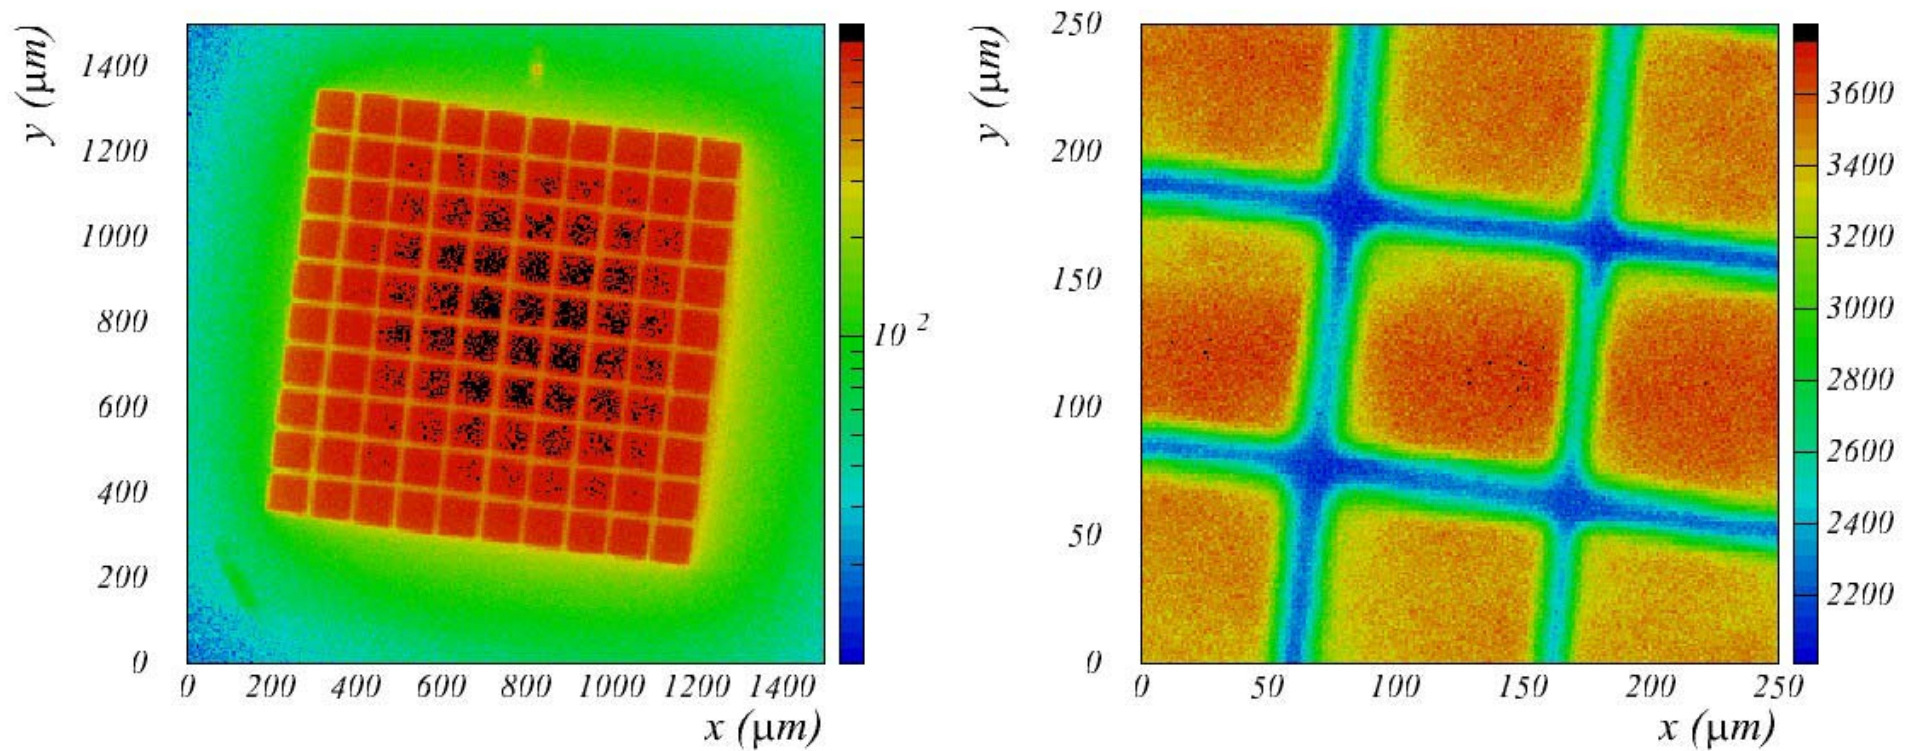


Time resolution: time walk correction


$\ll 1$ photon

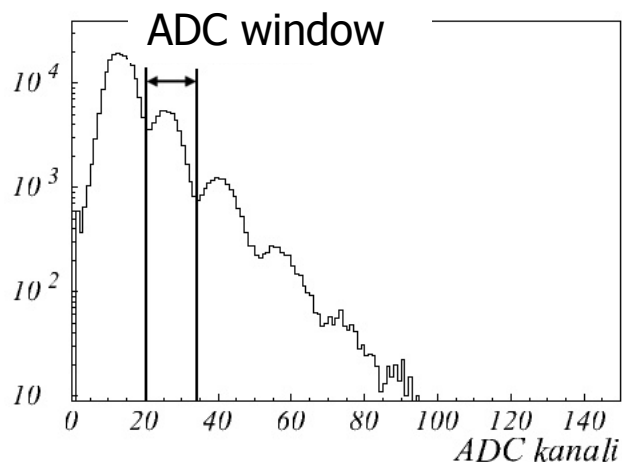


uncorrected TDC

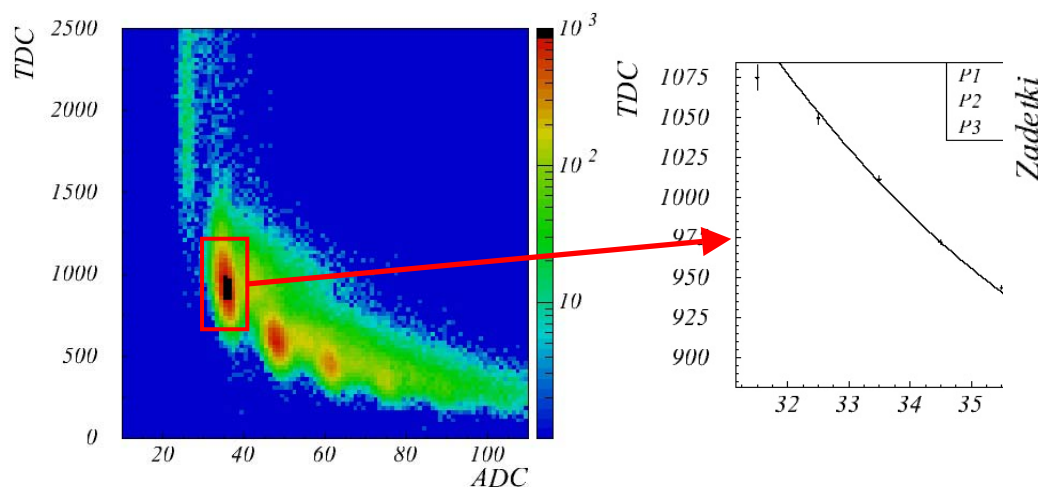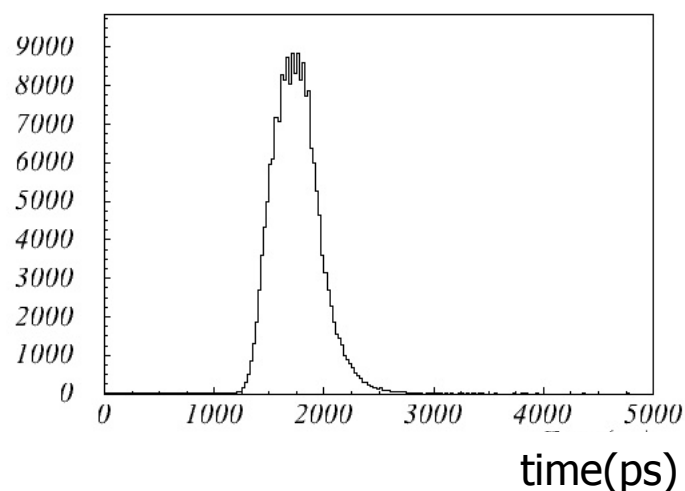

corrected TDC

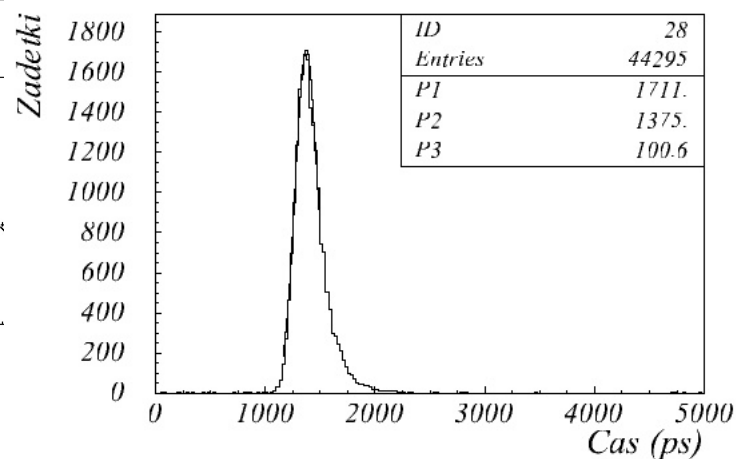

Time resolution: blue vs red

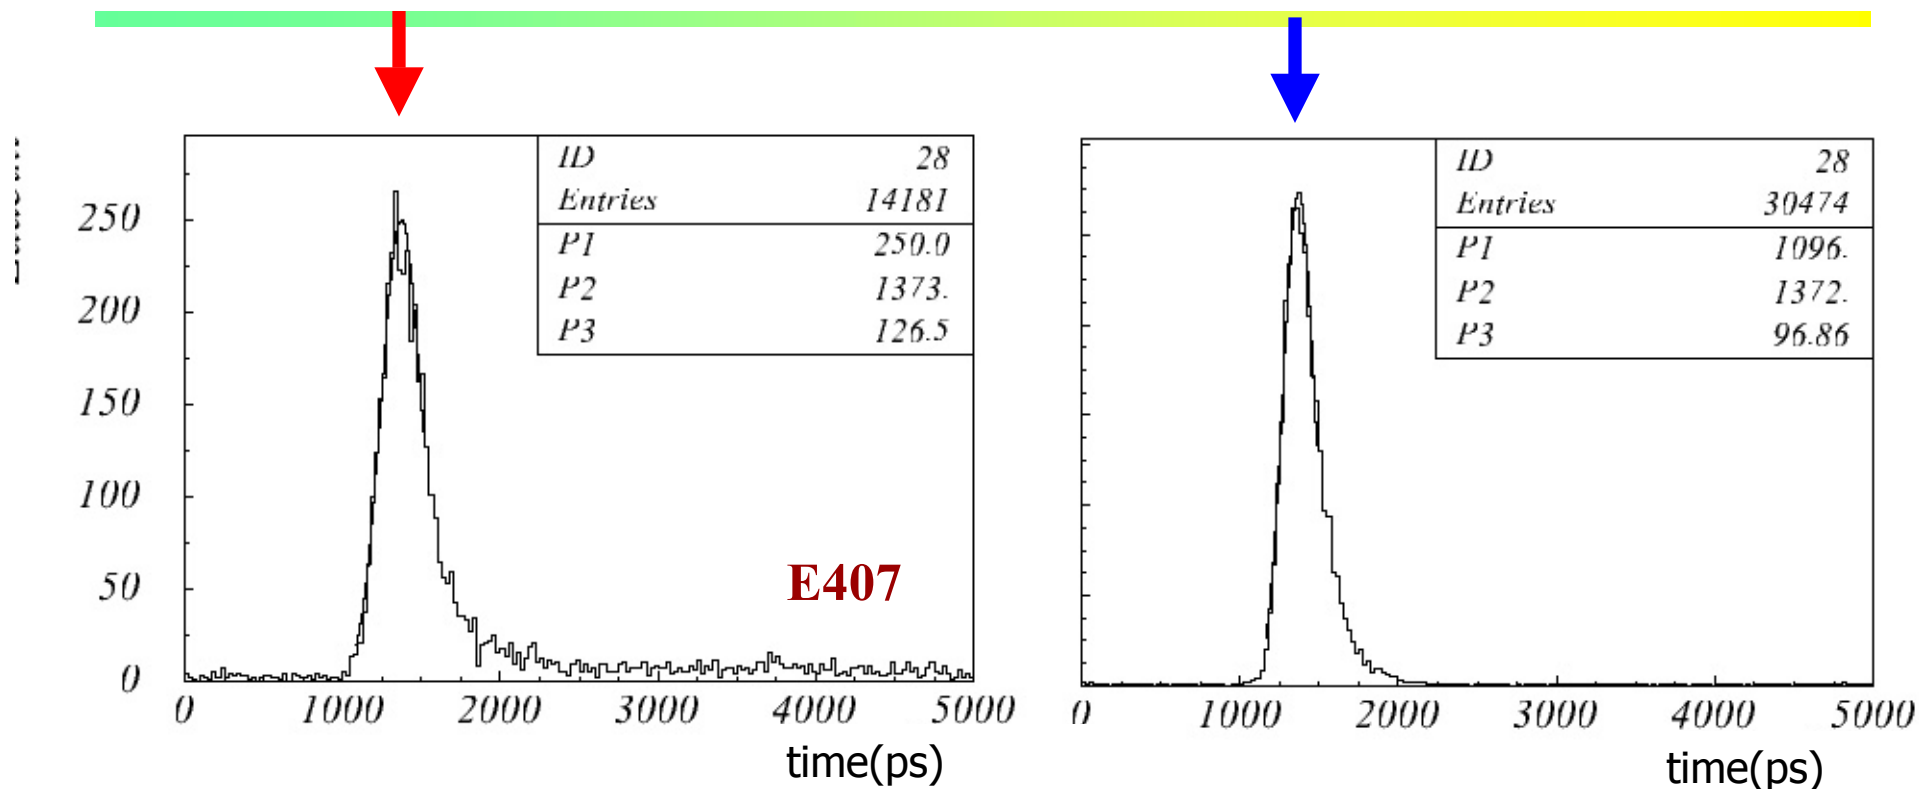


	E407	S137	H100C	H050C	H025C
σ_{red} (ps)	127	182	145	212	154
σ_{blue} (ps)	97	151	136	358	135

• $\sigma \approx 100$ ps

• $\sigma_{\text{red}} > \sigma_{\text{blue}}$



External secondary photon cross talk

Worry: light emitted by SiPM can be reflected back to the photon detector surface

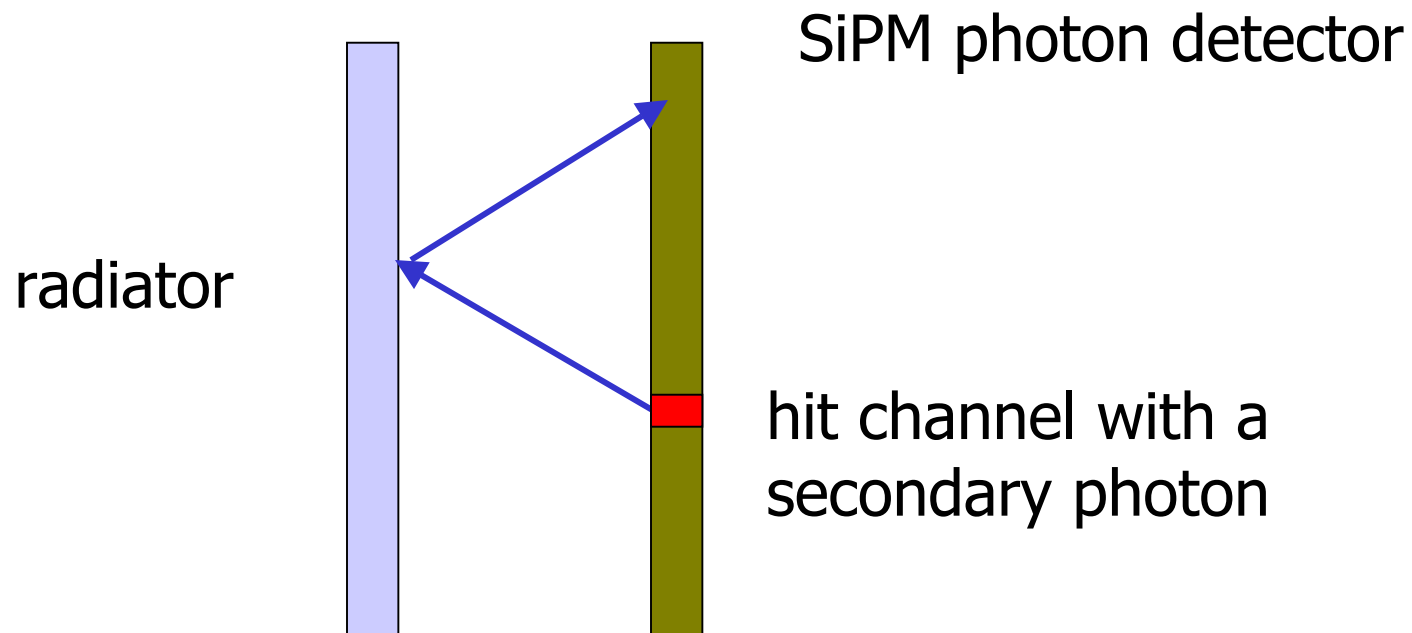


External secondary photon cross talk

Scan a SiPM in front of a second one, observe coincidence rate

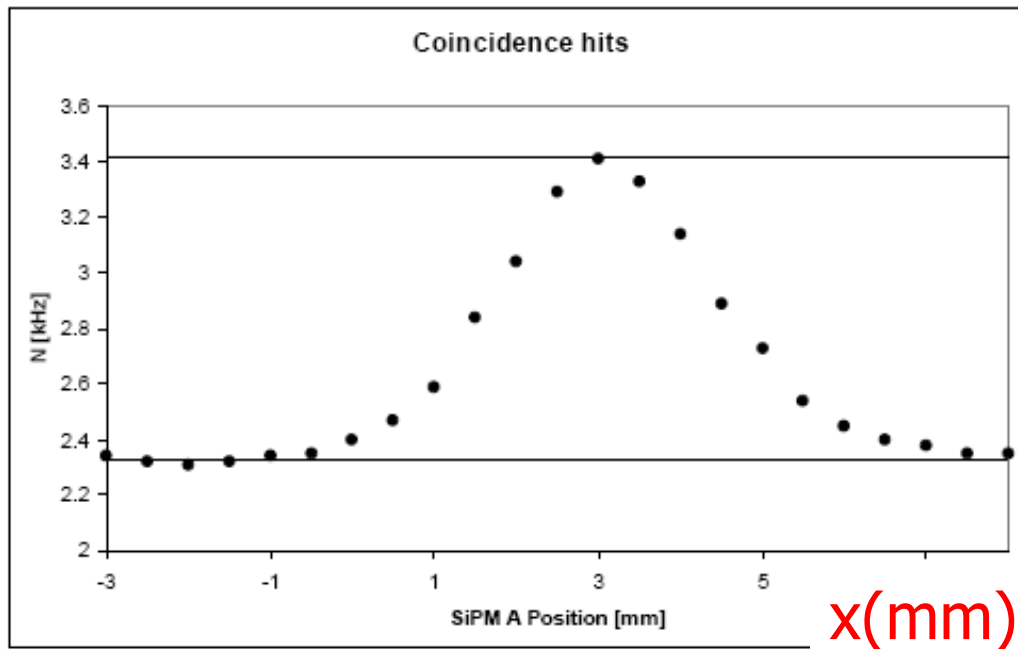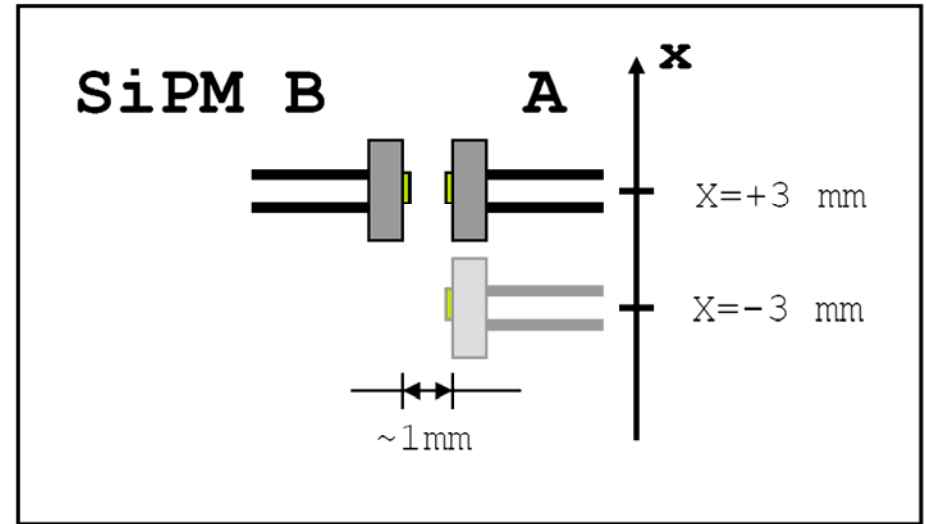

SiPM A and B: Hamamatsu MPPCs


External secondary photon cross talk

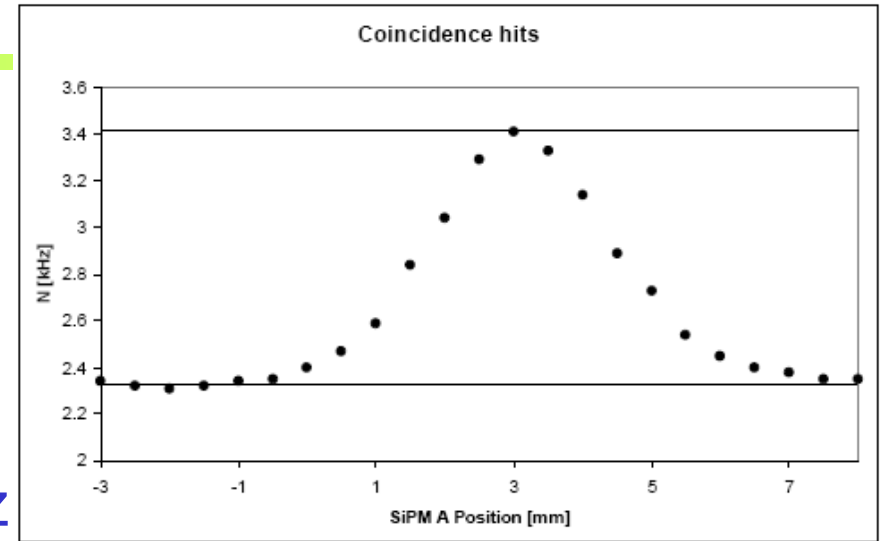


- single detector dark rate ~ 200 kHz
 - coincidence background ~ 2.4 kHz
 - when SiPMs overlap, coincidence rate increases by ~ 1 kHz
 - 1mm active area 1mm away $\sim 15\%$ of 2π solid angle
 - full (2π) solid angle: $1\text{kHz}/(2 \times 200\text{kHz}) / 15\% \sim \mathbf{2\%}$
- **OK** (even with an assumption of a 100% reflectivity of the radiator surface → gets reduced by two further orders of magnitude)

Light guides


- Effective increase of the active surface
- Improvement of the signal/noise ratio (collecting more signal photons for fixed dark count rate)

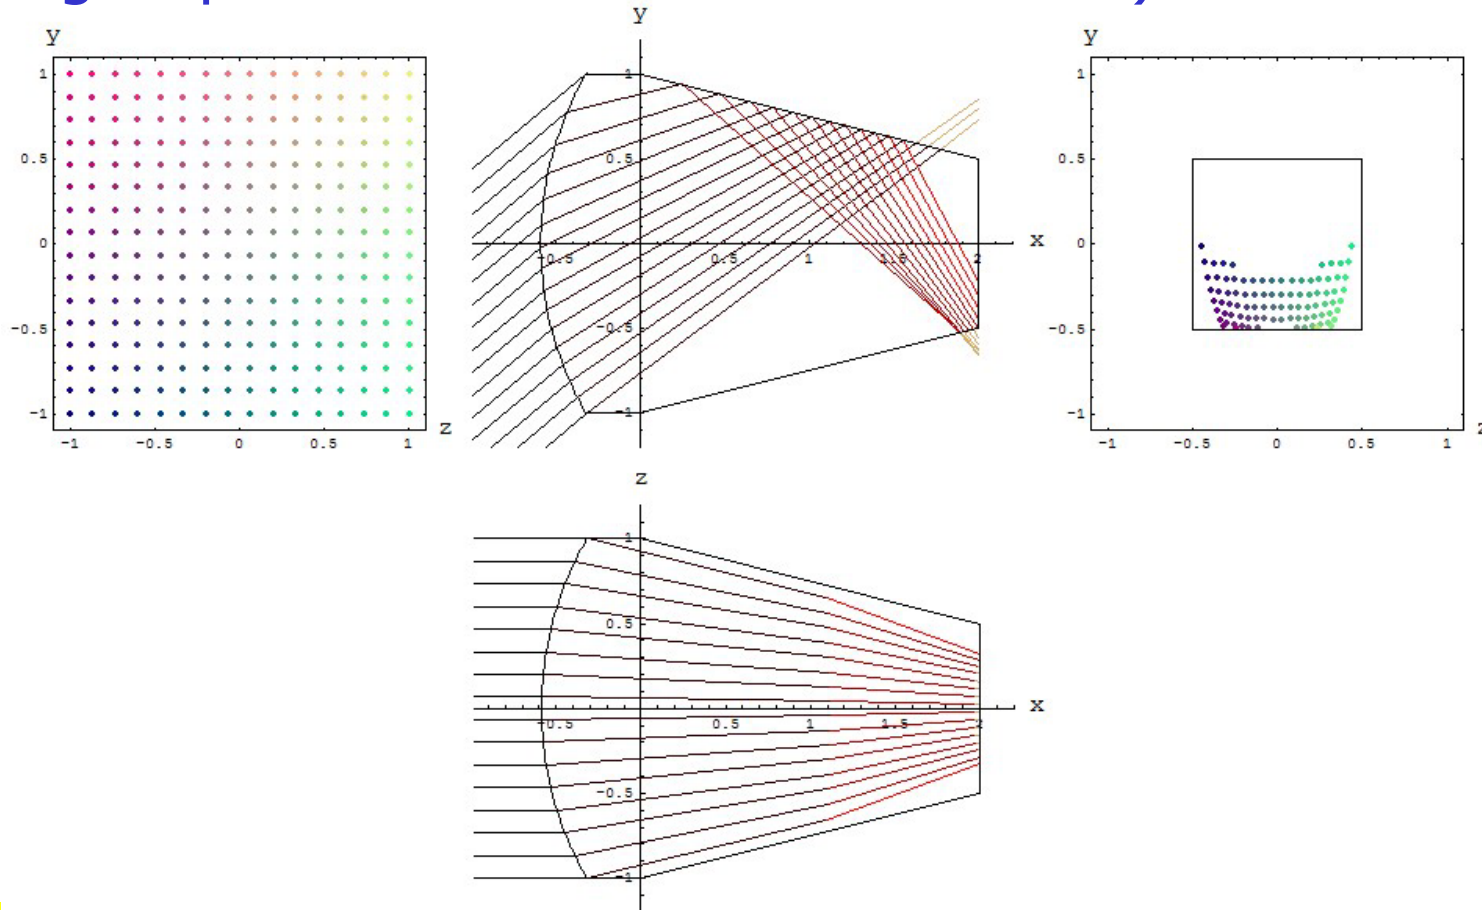


Planar entry window

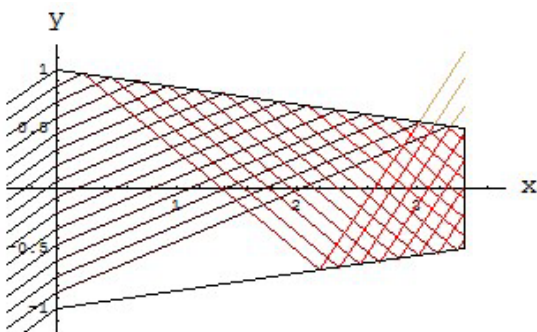




Spherical entry window

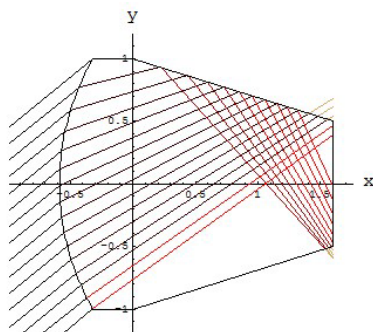

Spherical entry window, reflective sides

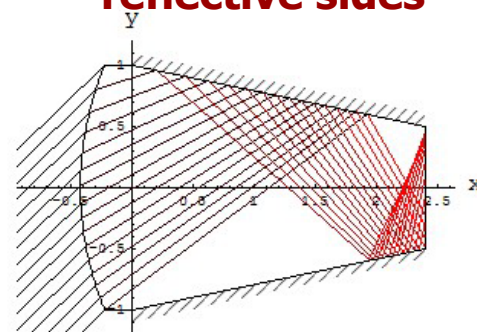




Efficiency vs. angle of incidence α

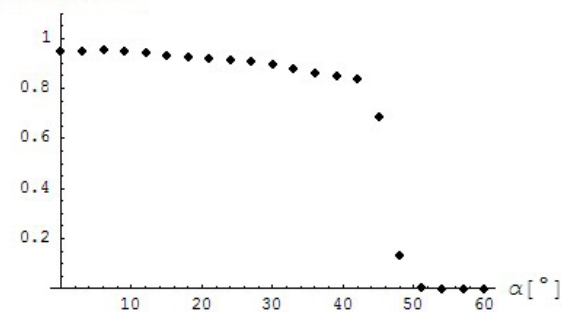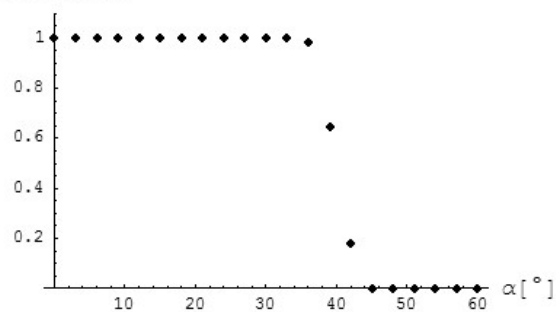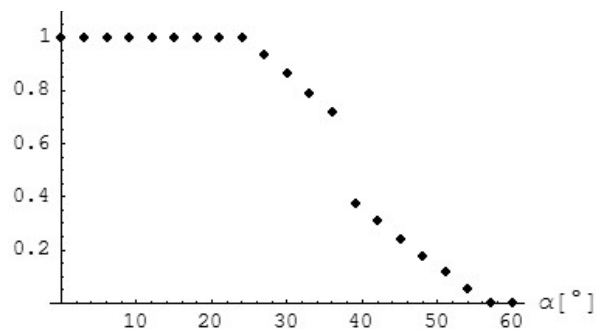

Light guide	d/a	R/a	$\alpha_{\min} , \alpha_{\max}$	I(-60°, 60°)
Planar entry	3.4	–	-24°, 24°	64%
Sph. entry	1.6	2.0	-35°, 35°	66%
Reflective sides	2.4	2.6	-44°, 44°	69%

Light collection: required angular range


For our application only a limited angular range of incident has to be covered at a given position on the detector

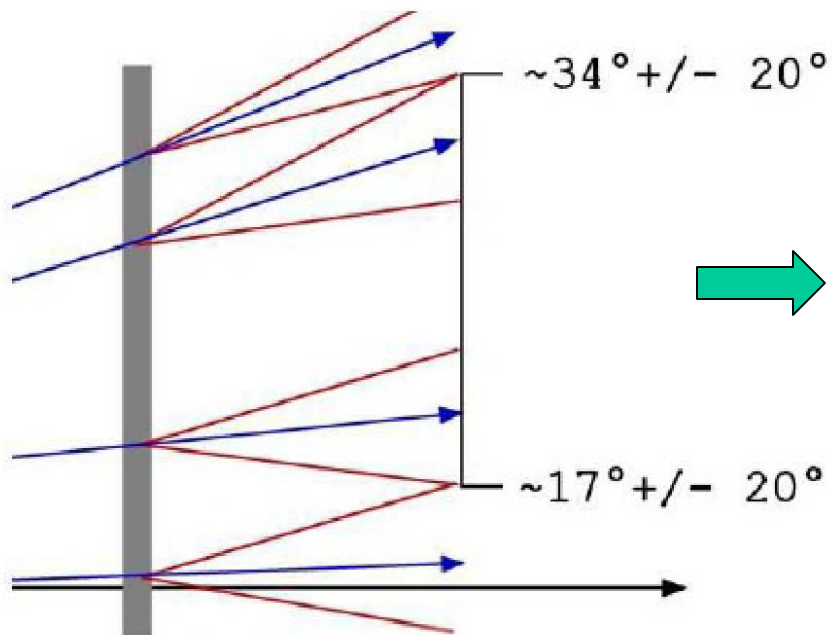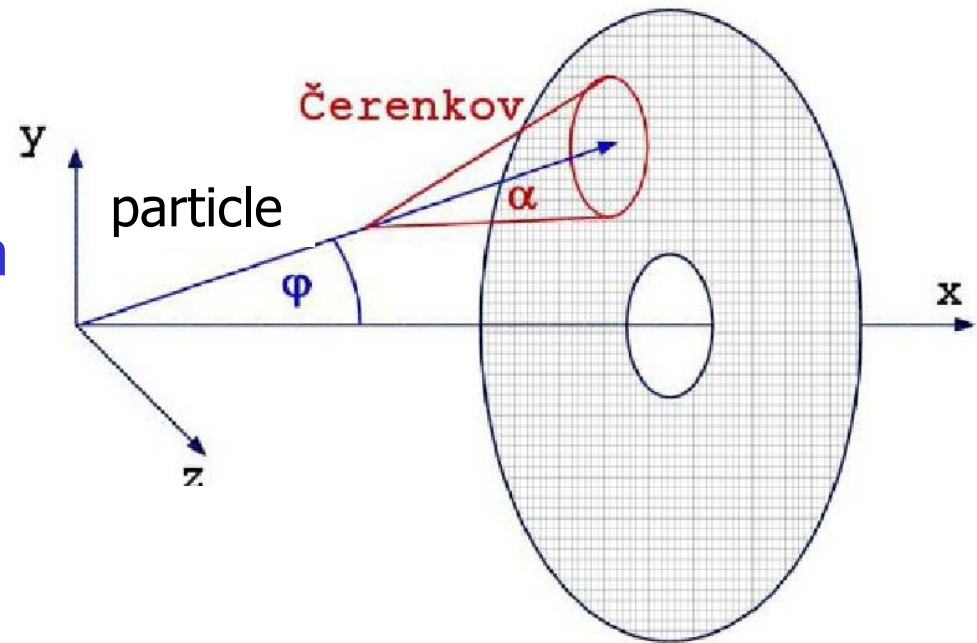


$\sim -3^\circ \dots 54^\circ$

→ Take this asymmetry into account when designing the light collection system.


Planar entry window

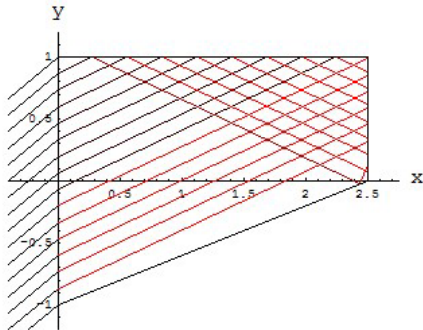




Spherical entry window

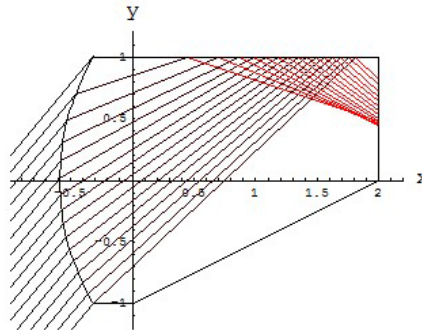


Spherical entry window, reflective sides

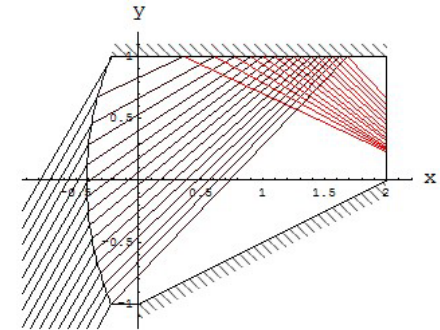


Efficiency vs. angle of incidence α

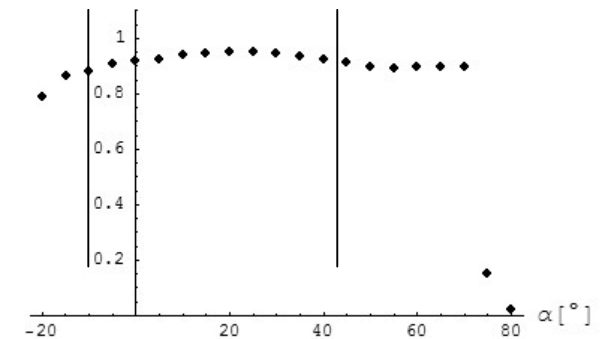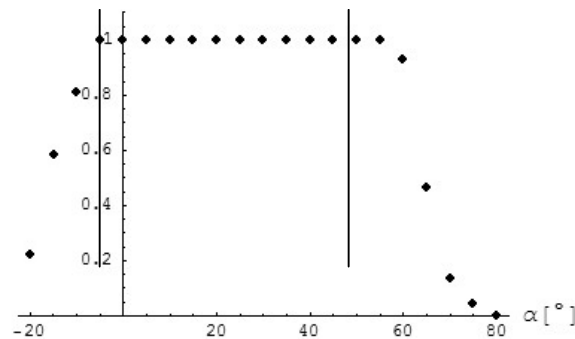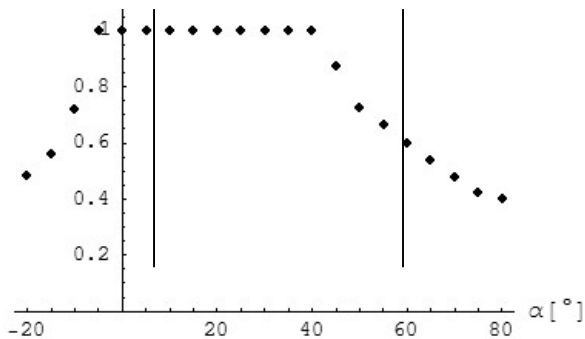

Light guide	D	R	$\alpha_{\min} , \alpha_{\max}$	I(-3°, 54°)
Planar entry	3.4	-	-6°, 41°	95%
Sph. entry	1.6	2.0	-6°, 58°	100%
Reflective sides	2.4	2.6	-19°, 71°	93%

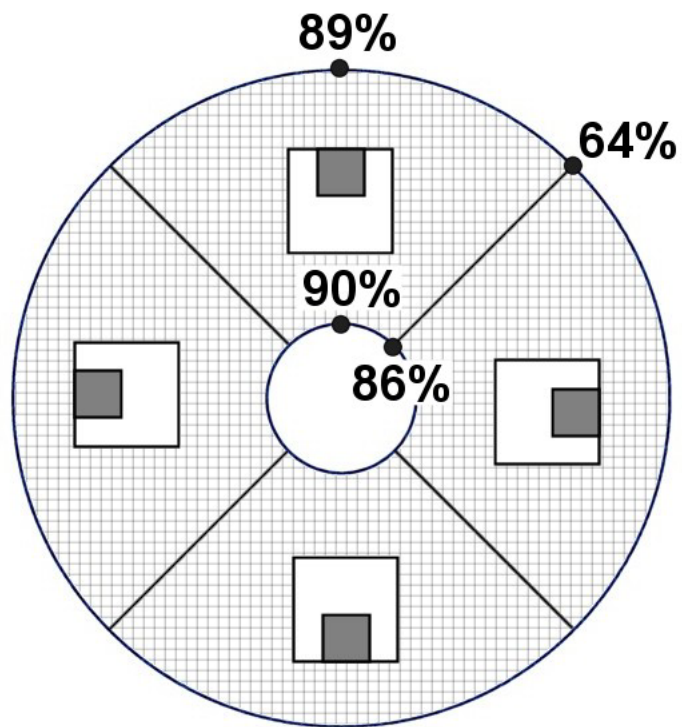

Design with a single
light guide type

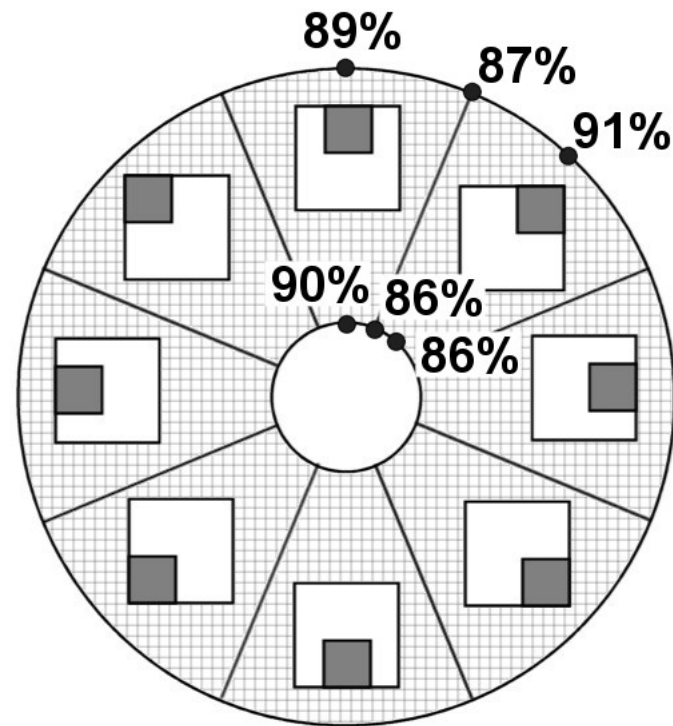

Design with a two
light guide types


Tests with cosmic rays

Photon detector:

- Array of 6 SiPMs
- Array of 12 R5900-M16 PMTs as reference

Set-up runs well, waiting for statistics to accumulate

→ will have results ready for RICH07 and IEEE/NSS 2007

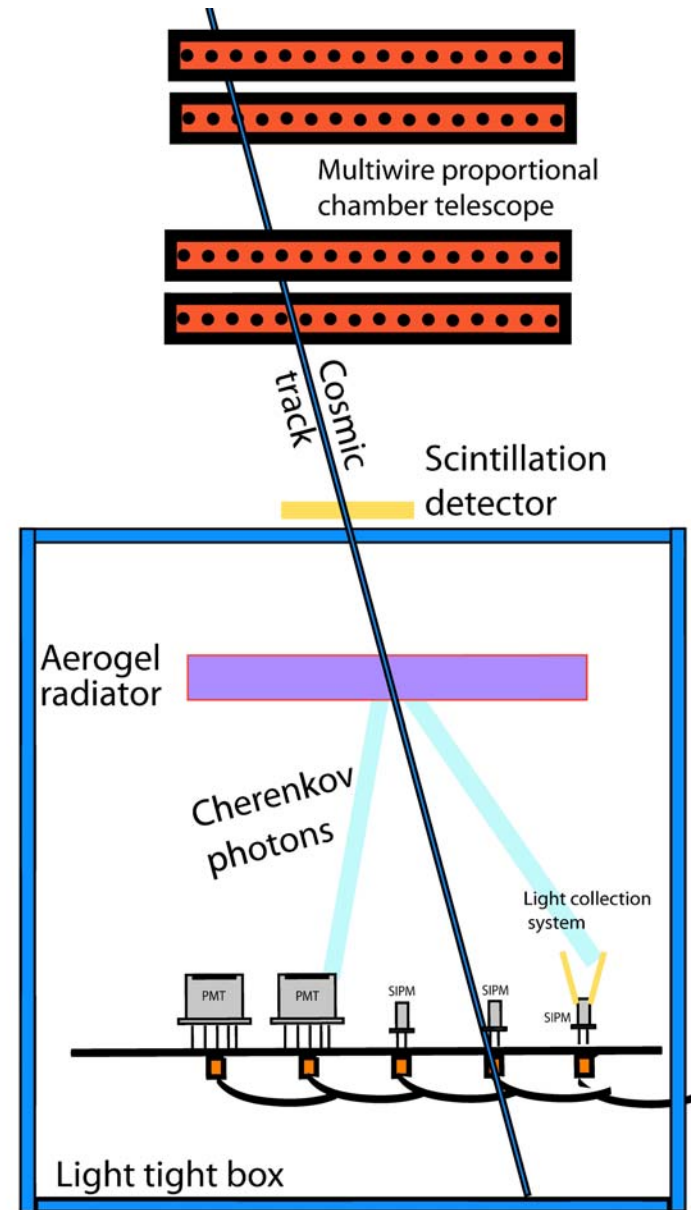

Summary

RICH counters of the next generation: new challenges,
operation in high magnetic field with excellent timing

Several photon detectors are being studied

SiPMs (G-APDs) look like a viable candidate

Needed: light guides and operation with a well defined
time window

Still some work to do...


- Read-out electronics
- Light guide + sensor integration
- Radiation hardness studies

We also work on a PET module...

Test a PET module with:

4x4 array of LYSO crystals ($4.5 \times 4.5 \times 20(30) \text{ mm}^3$)

16 SiPMs (Photonique $2.1 \times 2.1 \text{ mm}^2$)


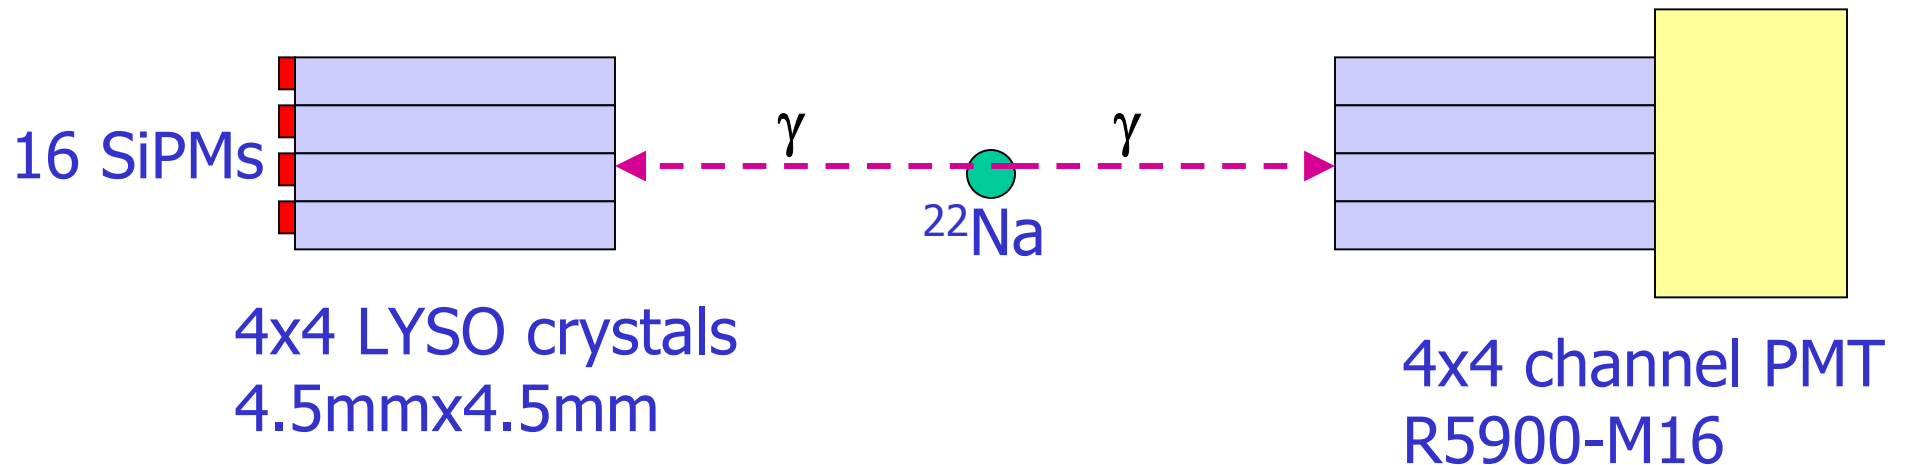


We also work on a PET module 2

Some tests with Na22 in coincidence with a 4x4
LYSO+MAPMT module

Best: $\sim 9\%$ (rms) energy resolution

Shown: one of the early results.

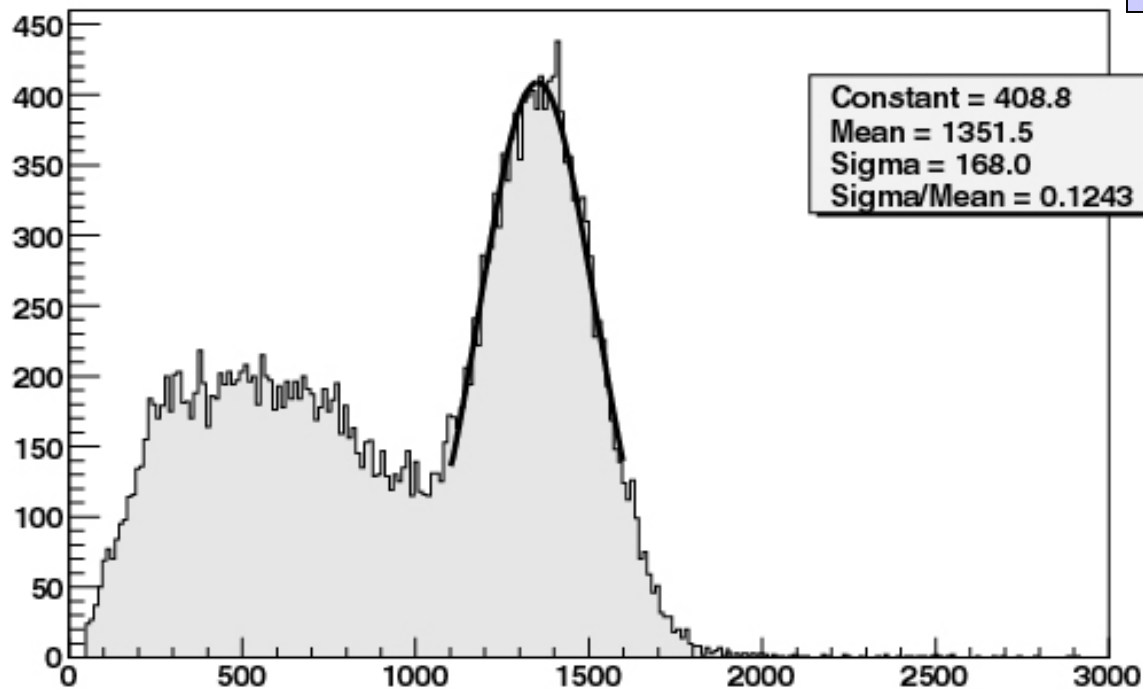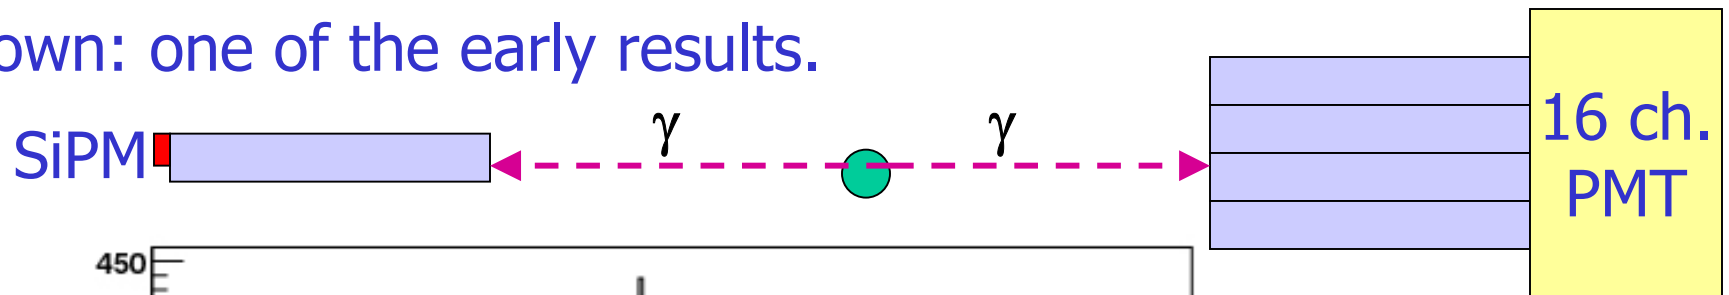

Se

Črižan, Ljubljana